


4CH Digital Video Recorder

User's Manual



SAFETY PRECAUTIONS

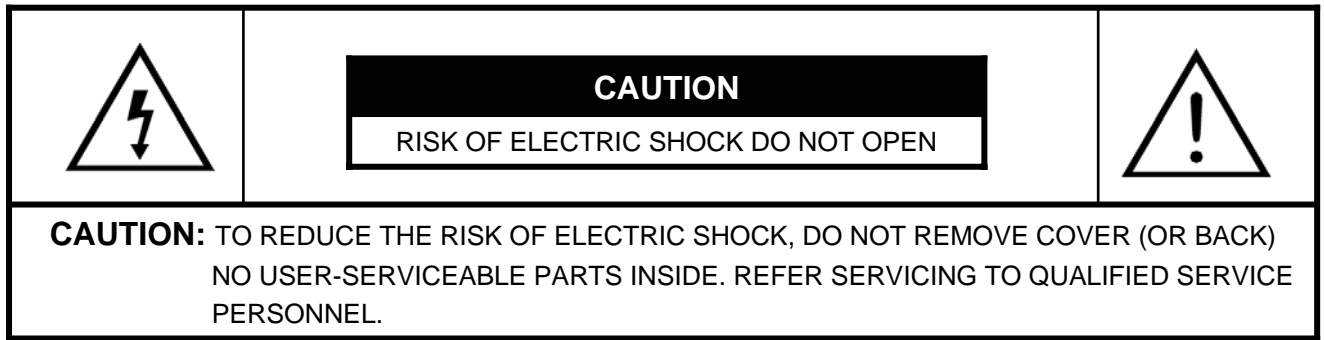

This label may appear on the rear of the unit due to space limitations.



The lightning flash with arrow point symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of importance operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Warning

To reduce the risk of fire or electric shock, Do not expose this product to rain or moisture.
Do not insert any metallic object through ventilation grills.



Power disconnect : Units with or without ON-OFF switches have power supplied to the unit whenever the power cord is inserted into the main source; However, the unit is operational only when the ON-OFF switch is in the ON position. To disconnect it from the main source, you have to disconnect the Power cord.

FCC COMPLIANCE STATEMENT

A CLASS A computing device subject to certification by the Commission shall be identified pursuant to Par 2.925 et Seq of the chapter. In addition, the label shall include the following statement:

**This device complies with Part 15 of FCC Rules.
Operation is subject to the following two conditions:
(1)This device may not cause harmful interference, and
(2)This device must accept any interference received,
including interference that may cause undesired operation.**

Where a device is constructed in two or more sections connected by wires and marked together, the statement specified in this Section is required to be affixed only to the main control unit.

The users manual or instruction manual for the EUT shall contain the following statement or equivalent.

Caution : Changes or Modifications not expressly approved by the party responsible for compliance could void the users authority to operate the equipment.

If the EUT requires accessories such as special shield cables and/or connectors to enable compliance with emission limits, the instruction manual for the EUT shall include appropriate instruction on the first page of the text concerned with the installation of the device that these special accessories must be used with the device. It is the responsibility of the user to use the needed special accessories supplied with the equipment.

For a CLASS A digital device or peripheral, the instruction furnished the user shall include the following or Similar statement placed in a prominent location in the text of the manual.

Note : This equipment has been tested and found to comply with the limits for a CLASS a digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment, This equipment Generates, uses and can radiate radio frequency energy and, if not in stalled and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of the this equipment in a residential area is likely to cause harmful interference in which cause the user will be required to correct the interference at his own expense.

Before Starting Your DVR Operation

This document is a basic manual for the SIGNALSYNC DVR users.

This manual describes the appearance and name of products, how to configure the system program, and how to use the system.

Before using SIGNALSYNC DVR, a user should read the contents of user manual, and then deal with the product considering the precautions defined in the manual.

To open the system case and touch the inner parts for corrective maintenance, a user should contact the place where he/she purchased the products to get the help from expert.

In addition, if there is any question for use or any damage on the product, please contact call the place where he/she purchased the products.

Precautions for safety (User should observe)

1. Precautions for installation

- Install the product on a flat floor not closed and retain the distance of more than 15 cm from the rear panel to the wall.
- Install the product on a well-ventilated place.
- Keep it away from strong magnetism or electromagnetic wave.
- Installing it near radio equipment such as TV and radio may cause a fault.
- Do not install it on a place that is exposed directly to the sun or contains lots of heat such as near a heating apparatus.
- Do not install it on a cold place.
- Place the equipment or tools in the site remote from a busy road so that people are not hurt.
- Do not install it on a place where there is severe vibration, much humidity or soot.
- Should use the product in the rated voltage (The equipment is used as both 110V and 220V, but it is set to 220V for delivery. It is possible to adjust it with the changeover switch on the rear panel.)
- Connect it to the outlet with the ground terminal.
- Discard the vinyl bag well. (It is dangerous to put it on the head.)

2. Precautions for use

- For the repair, contact the company or the place where you purchased the product.
- Read the user manual before using the product.
- Do not open the cover at your discretion because there are parts sensitive to the environment within the equipment.
- Arrange the power cord safely and do not touch it with wet hands.
- Do not use a loose outlet or a damaged power cable.
- Do not use benzene, thinner and alcohol for cleaning. They may deform the product.
- Do not touch the exposed terminal.
- For the power-off of system, normally turn off the power of the program and then, power off the peripherals. (Do not power it off with the power button on the front panel of body.)
- Be careful to prevent a conductive object from falling into a hole that was punched for ventilation.
- Do not disassemble and remodel the product.
- Do not place a heavy thing on the body.
- Do not give a shock during the movement of equipment.
- If you use the product in the state of smoke or smell emitted, it may cause a fire or an electric shock. For this case, immediately block the power switch and contact the company or the place where you purchased the product to consult it with a special technician.

This user's manual is subject to change without any notice by function upgrade and so on.

Table of Contents

I. Introduction

- 1. Package Contents**
- 2. Features**
- 3. Front Panel and Rear Panel Connection**

II. Installation

- 1. Front Panel**
- 2. Rear Panel**
- 3. Remote Controller (Optional)**
- 4. Menu Tree**

III. Main MENU Programming

- 1. Overview Main Menu**
- 2. SYSTEM SETUP**
- 3. DISPLAY SETUP**
- 4. RECORDING SETUP**
- 5. ALARM SETUP**
- 6. MOTION SETUP**
- 7. WEEKLY SETUP**
- 8. NETWORK SETUP**
- 9. ARCHIVING**
- 10. HDD INFORMATION**
- 11. SEARCH LIST**
- 12. DISPLAY Mode**
- 13. RECORDING Mode**
- 14. PLAYBACK Mode**

IV. Software Upgrade Procedure

APPENDIX 1. Specification

- 2. Pin Description of connectors**

I. Introduction

1. Package Content

When purchasing SIGNALSYNC product, unpack it at first and unload it on a flat floor or a place where it is to be located. Then, verify that the following contents are contained.

- 4CH DVR
- Power code
- Rack Mount Bracket
- User's manual
- Install CD
- Remote controller (Optional)




4CH DVR



Power Code



Rack Mount Bracket

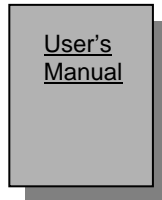

User's Manual



Install CD




Remote controller (Optional)

2. Features

This DVR provides recording capabilities for four camera inputs. It provides playback or live display and network function while in recording mode. And also it offers the following features:

- ◆ **4 Composite Input Connectors/ 4 Loop-Through Video Connectors**
 - Compatible with Color (NTSC or PAL) and B&W (CCIR and EIA-170) Video
- ◆ **Display and Record Video Resolution**
 - NTSC (720x480), PAL (720x576)
 - Single, QUAD, Sequential Image Display
 - 4CH multiplexing video recording with 720x480 resolution (NTSC)
- ◆ **Compression: M-JPEG**
 - Standard image, high quality; 16KB / field
- ◆ **Multiple Search Engines (Date/Time, Event)**
- ◆ **Records up to 60 NTSC IPS (50 PAL Images per Second)**
- ◆ **Continuous Recording in Disk Overwrite Mode**
- ◆ **Simultaneously Record, Playback and Network**
- ◆ **Archiving using USB Memory Drive**
 - USB 1.1 Storage Class support
- ◆ **User-friendly Graphical User Interface (GUI)**
- ◆ **Manual/ Schedule and alarm/ motion recording Modes (Time and Event)**
- ◆ **Alarm input Connections, relay output connection**
- ◆ **Network Function**
 - Dynamic IP (DHCP, Floating IP) support
 - Live or Recorded Video Access via Ethernet
 - Remote configuration
 - DDNS Client support
- ◆ **Audio Recording and Playback**
 - 1ch audio support

3. Front Panel and Rear Panel Connection

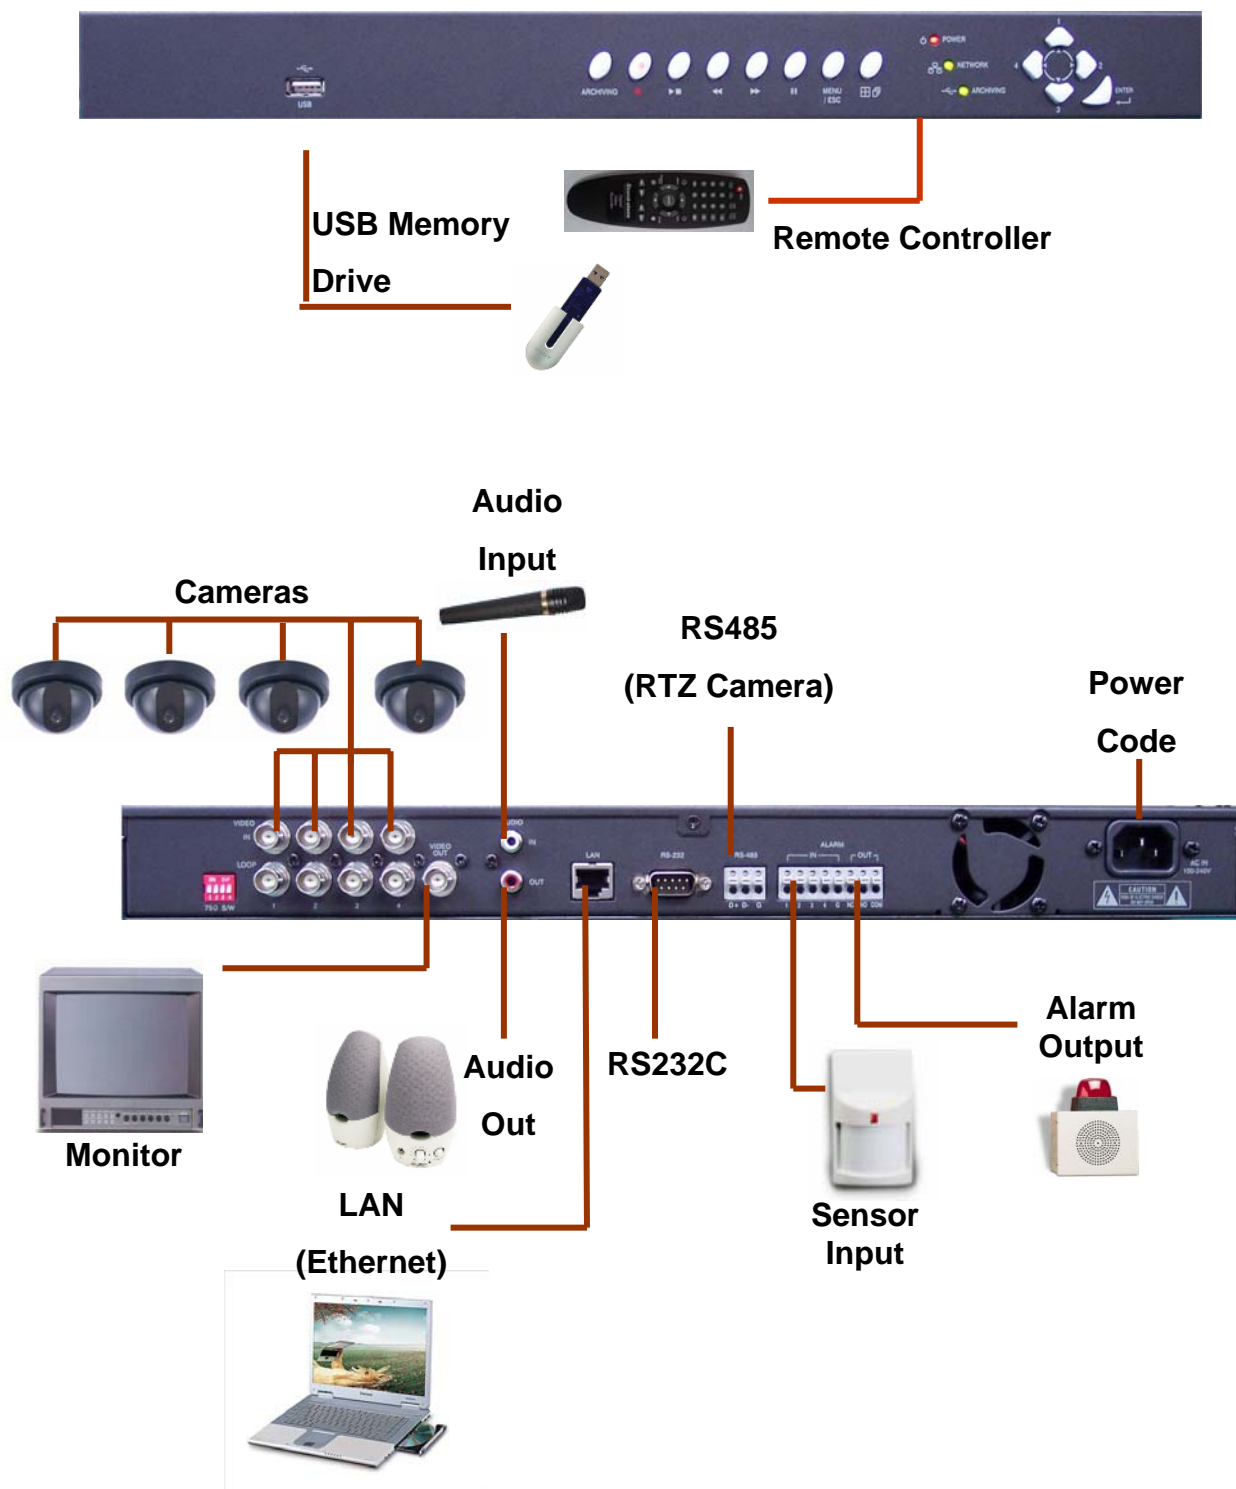

II. INSTALLATION

Front Panel



1

2 3 4 5 6 7 8 9

10

11 12

1. USB port

A USB port is provided to connect external USB memory drive for archiving video.

2. Archiving button

Whenever **ARCHIVE** button is pressed, archiving will be started.

3. REC/ STOP button ●

Press REC (**Red circle**) to begin record. Press REC to stop recording again. This is toggle button.

4. PLAY/ STOP button (▶)

If **PLAY/ STOP** is pressed, search lists will be displayed to begin playback. After selecting one recorded file, playback will be started by **PLAY/ STOP** button. To stop playback, **PLAY/ STOP** button is used. This is toggle button. While it is in high speed playback mode like FF or REW, it return to playback by **PLAY/ STOP** button.

5. FF (▶▶)

Press FF to perform high speed forward playback. It support 2 to 32 times playback speed.

6. REW (◀◀)

Press REW to perform high speed backward playback. It support 2 to 16 times playback speed.

7. PAUSE ■■

Press PAUSE to pause playback.

8. MENU/ ESC

Press **MENU/ESC** button to enter menu system. Also **MENU/ESC** is used to escape upper menu and to save set-up parameter at the same time .

9. QUAD/ SEQ

This button is used for QUAD, sequential display. It is rotated as QUAD → Sequential → QUAD.

10. LEDs for Power ON, Archiving, Network Indication



1) Power On indicator

Indicates power is ON when power LED is lit.

2) Network indicator

Indicates data transmission via network is performed when network LED is lit.

3) Archiving indicator: Indicates archiving has been doing when archiving LED is lit.

4) Remote controller sensor input window

11. Direction (Number) buttons



It consists of **UP**(1), **RIGHT**(2), **DOWN**(3), **LEFT**(4) buttons.

NOTE: These buttons are used in numbering input for password, in left/ right movement and increasing/ decreasing parameter for MENU.

12. ENTER button

Press **ENTER** button to confirm a selection.

Rear Panel

2



1

3

4

5

6

7

8

9

10

11

1. 75 Ohm Termination Switch

If you want to connect loop-through video outputs into another video equipments, 75 Ohm termination switch should be “OFF”. Then, another video equipments should be 75 ohm terminated.

If loop through video outputs are not connected to another video equipments, it should be “ON”.

If 75 Ohm termination switch “ON” or “OFF” is changed, it will cause poor video quality.

2. 4CH Video Input: 4 channel composite video inputs with BNC connectors

Since this DVR automatically detects video format (NTSC or PAL) as soon as power is ON, NTSC or PAL video sources can be connected. But NTSC and PAL video sources for 4CH video inputs can not be mixed. If they are mixed, DVR can’ not be operated properly.

3. 4CH Loop through outputs: 4 channel composite video outputs with BNC connectors

If the connection of loop-through video outputs into another video equipments is requested, 4CH Loop-Through outputs can be utilized for it. If loop-through video outputs will be connected to another video equipments, 75 Ohm termination switch should be “OFF”. Then, another video equipments should be 75 ohm terminated.

4. Video Output 1: composite video output

Connect this video output to monitor so that live, playback pictures would be monitored.

5. Audio Input, Audio Output: Unbalanced audio signal input with RCA jack

This DVR can record audio. Connect the audio source to audio input. Connect audio output to your amplifier because the DVR does not have amplified audio output, so you will need a speaker with an amplifier. The audio input can be from an amplified source or directly from a microphone.

6. Ethernet Port: RJ45 jack

Connect a Cat5 cable with an RJ-45 jack to the DVR connector. Remote PC viewer software via network enable you to live viewing or searching.

7. RS232C serial port

An RS232 port is provided to connect other external equipments. Use DB-9S (female) connector to connect to the DVR.

8. RS485: For camera pan and tilting control

This DVR can be controlled remotely by remote PC software. The RS485 connector can be used to control PTZ (pan, tilt, zoom) cameras. Connect RX+, RX- of the control system to the TX+, TX- (respectively) of the DVR.

9. Alarm input and relay output: 4 alarm inputs and 1 relay output with NO, NC

To make secure connections on the Alarm Connector Strip, press and hold the button and insert the wire in the hole below the button. After releasing the button, tug gently on the wire to make certain it is connected. To disconnect a wire, press and hold the button above the wire and pull out the wire.

4 Alarm Inputs: 1,2,3,4,G(Ground)

You can use external devices to signal the DVR to react to events. Mechanical or electrical switches can be wired to the Alarm Inputs and GND (Ground) connectors. The threshold voltage is 4.3V and should be stable at least 0.5 seconds to be detected.

G (Ground), **COM** (common): G is same as common.

Connect the ground side of the Alarm input to G (Ground). Connect the ground side of relay output to COM connector.

Relay output:

The DVR support NO, NC relay output at the same time. You can select NO or NC , according to characteristic of mechanical or electrical switch.

10. FAN for cooling


11. AC outlet

Connect the power cord to the DVR and then to the wall outlet (100-240V AC).

Remote Controller (Optional)

< Remote Controller buttons >

< Button Description >

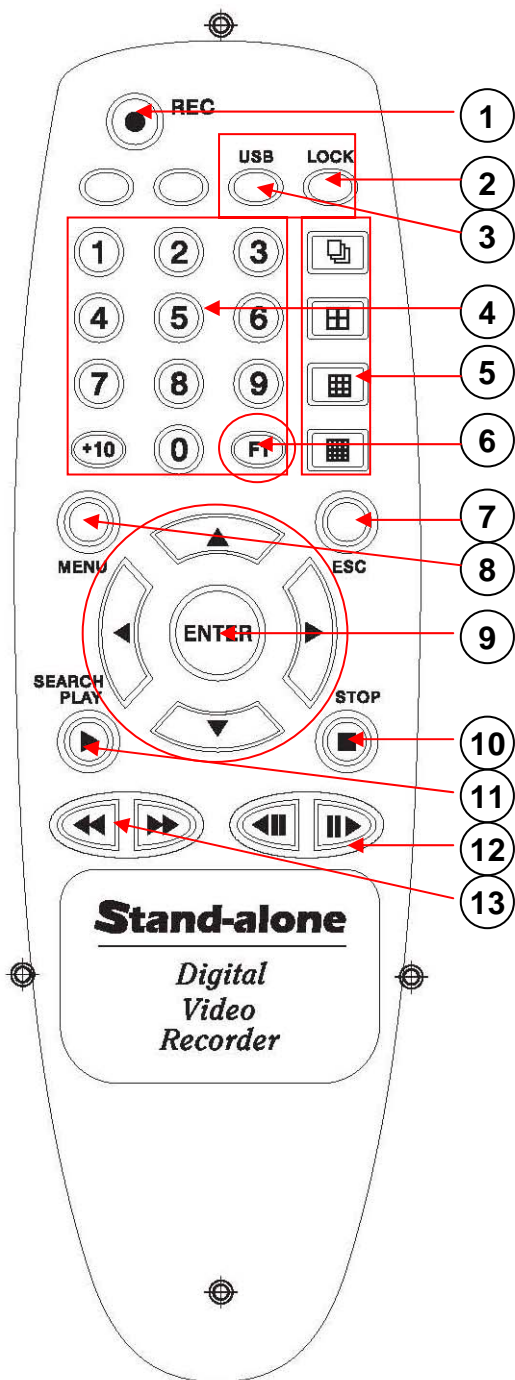

No	Description	Button Name
1	Recording Start/ Stop button	REC
2	Button LOCK Enable/Disable	LOCK
3	Archiving Start button	USB
4	Video CH selection buttons	1,2,3,...,0, +10
5	1) Sequential display button 2) QUAD display button 3) 9 picture display button 4) 16/ 8/ 10 picture display button	Video Picture Display mode
6	Main picture selection button in 8. 10 picture display mode	Function
7	Movement to upper menu	ESC
8	Movement to menu mode	MENU
9	1) UP (▲) 2) DOWN (▼) 3) LEFT (◀) 4) RIGHT (▶) 5) ENTER	Direction (Password Number Input) and ENTER buttons
10	Playback Stop button	STOP
11	Playback Start button	Search/ PLAY
12	PAUSE/ 1 field movement backward. PAUSE/ 1 field movement forward.	Movement forward or backward by 1 Field.
13	Fast Playback buttons	FF, REW

Menu Tree

MAIN MENU	
1	SYSTEM SETUP
2	DISPLAY SETUP
3	RECORDING SETUP
4	ALARM SETUP
5	MOTION SETUP
6	WEEKLY SCHEDULE
7	NETWORK SETUP
8	ARCHIVING
9	HDD INFORMATION

ALARM SETUP	
1	FRAME RATE
2	DURATION
3	SENSOR TYPE
4	TRIGGER OUT
5	BUZZER ALERT

WEEKLY SCHEDULE		
WEEK	START	DURATION
SUN	00: 00	00: 00
MON	00: 00	00: 00
TUE	00: 00	00: 00
WED	00: 00	00: 00
THU	00: 00	00: 00
FRI	00: 00	00: 00
SAT	00: 00	00: 00
HOLIDAY	NONE	NONE

SYSTEM SETUP	
1	LANGUAGE
2	VIDEO FORMAT
3	PASSWORD
4	ADMIN LOCK
5	TIME FORMAT
6	DATE FORMAT
7	DATE/TIME SET
8	DEFAULT
9	REV STATUS

RECORDING SETUP	
1	QUALITY
2	FRAME RATE
3	AUDIO
4	STOP KEY

NETWORK SETUP	
1	CONNECT
2	IP ADD
3	SUB NET
4	GATE WAY
5	DNS
6	PORT
7	NTP TIME
8	TIME ZONE
9	DDNS STATUS

ARCHIVING	
1	ARCHIVING TYPE
2	ARCHIVING TIME
3	ARCHIVE INFO NAME: / TOTAL:
4	ARCHIVE LOG

DISPLAY SETUP	
1	ADJUST CHANNEL
	BRIGHTNESS
	CONTRAST
	PTZ TYPE
2	SEQ DWELL TIME
3	TIME/DATE OSD
4	CAM NUMBER OSD
5	VIDEO LOSS OSD
6	POP-UP DISPLAY
7	POSITION

MOTION SETUP	
1	SENSITIVITY
2	FRAME RATE
3	DURATION
4	CAM1
5	CAM2
6	CAM3
7	CAM4
8	BUZZER ALERT

HDD INFORMATION	
1	HARD DISK
	TOTAL FREE
2	FORMAT HDD
3	OVERWRITE

III. Main Menu Programming

1. Overview Main Menu

Before using your DVR for the first time, you will want to establish the initial settings. This includes items such as time and date, password, display, record mode, network and so on.

In order to program Main Menu, first press **MENU/ESC** button of front panel in DVR. If ADMIN LOCK is set as YES (factory default is YES), below figure will be appeared.



Then input password number using UP(1), RIGHT(2), DOWN(3), LEFT(4) Buttons (Factory default number is 1111), and press ENTER button. **MAIN MENU** will be appeared.


NOTE:

To access the DVR Main Menu, press **MENU/ESC**. To escape MENU, **MENU/ESC** button is also used. Buttons for movement in Menu are ◀(4), ▶(2). Button for selection is **ENTER**, Buttons for increasing or decreasing parameter are ▲(1), ▼(3). Press **MENU/ESC** to return to the previous MENU after setting and to save the values of setup.




◀ (LEFT & 4), ▶ (RIGHT & 2), ▲ (UP & 1), ▼ (DOWN & 3) and ENTER buttons.

< MAIN MENU >

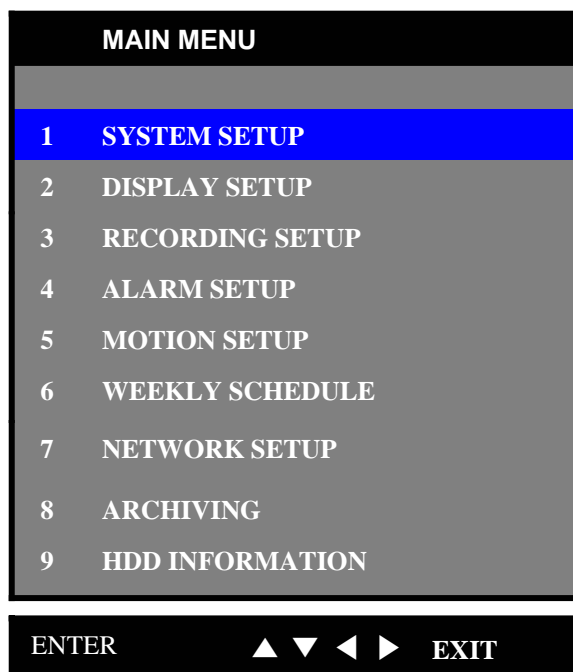

2. SYSTEM SETUP

To access SYSTEM SETUP, press **ENTER** button after moving highlight bar to SYSTEM SETUP in MAIN MENU. Below menu will appear on monitor.

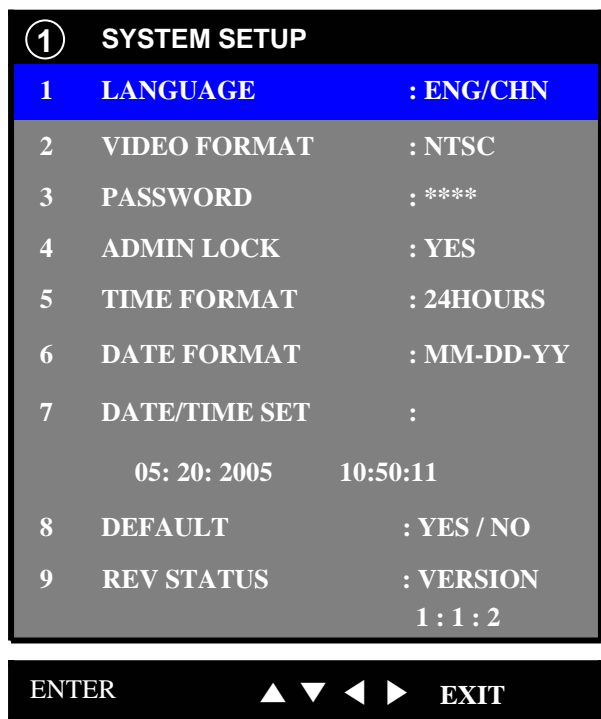

1) LANGUAGE : Language Selection

The languages supported are English, Chinese, Japanese.


2) VIDEO FORMAT: NTSC/ PAL

Video format is automatically detected after power ON. The detected video information will be displayed on VIDEO FORMAT. User don't need to change video format.


3) PASSWORD:

Move Highlight bar to PASSWORD in the SYSTEM Menu using **DOWN** or **UP** button . And then press **ENTER** to change password. For four digit password input, **UP**, **RIGHT**, **DOWN** and **LEFT** buttons can be used.


NOTE: Factory Default is “Pressing UP button four times”.

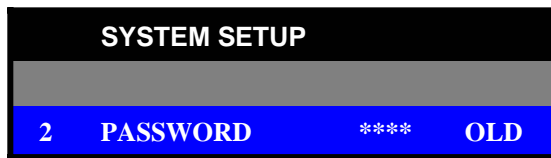

←Input old password. (Factory Default is 1111)

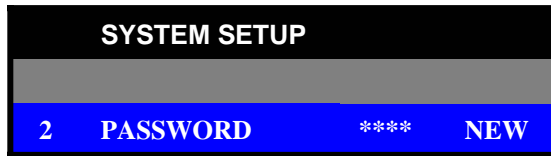

←Input new password. Enter the password by pressing the appropriate combination of four number, UP(1), RIGHT(2), DOWN(3), LEFT(4) buttons.

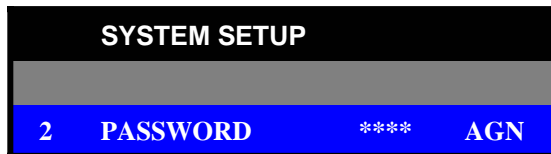

←Input new password again to confirm new password.

4) ADMIN LOCK: YES/ NO

Move Highlight bar to ADMIN LOCK in the SYSTEM Menu using DOWN or UP button . If ADMIN LOCK is selected as YES by LEFT or RIGHT, password is requested whenever entering menu. If NO, password isn't requested.

5) TIME FORMAT: 24/ 12 HOURS

Move Highlight bar to TIME FORMAT in the SYSTEM Menu using DOWN or UP button and press the LEFT or RIGHT button to select 24 HOURS (military time) or 12 HOURS (AM/PM). Whenever Time Format is changed, clock information on monitor and file information in search list will be changed together.

6) DATE FORMAT: MM-DD-YY/ DD-MM-YY/ MM-DD-YY


Move Highlight bar to DATE FORMAT in the SYSTEM Menu using DOWN or UP button. Date format can be changed using LEFT or RIGHT button.

7) DATE/ TIME SET:

Move Highlight bar to DATE/TIME SET in the SYSTEM Menu using DOWN or UP button. And then press ENTER to set the time.

NOTE:

1. If you set a date and time that is older than some of your recorded images, it is not easy to manage recorded files.
2. Before starting your DVR, DATE/ TIME should be setting properly.

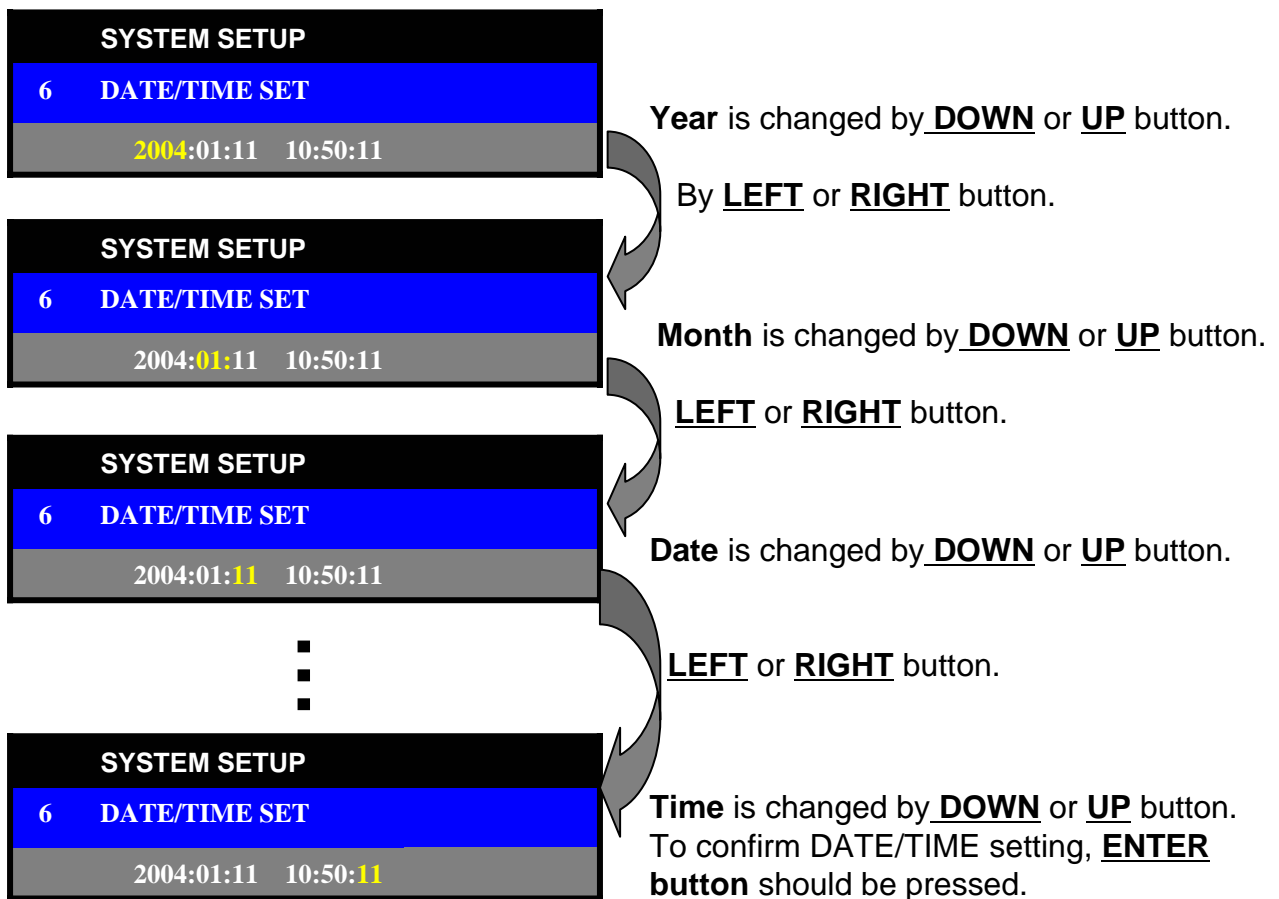

After setting DATE/ TIME, ESC or ENTER button can be used in order to return upper Menu.

8) DEFAULT: Return to factory default mode.

9) REVISION STATUS

It shows DVR software version. Whenever upgrading software, upgraded version will be displayed.

3. DISPLAY SETUP

② DISPLAY SETUP		
1	ADJUST CHANNEL	CH1, CH2, CH3, CH4
	BRIGHTNESS	1-99 %
	CONTRAST	1-99 %
	PTZ TYPE	
2	SEQ DWELL TIME	NONE, 1-60 SEC
3	TIME/ DATE OSD	ON/ OFF
4	CAM NUMBER OSD	ON/ OFF
5	VIDEO LOSS OSD	ON/ OFF
6	POP-UP DISPLAY	ON/ OFF
7	POSITION	

ENTER ▲ ▼ ◀ ▶ EXIT

To access DISPLAY SETUP, press **ENTER** button after moving highlight bar to DISPLAY SETUP in MAIN MENU. Above menu will appear on monitor.

1) ADJUST CHANNEL: CH1, CH2, CH3, CH4

The camera channel to adjust brightness, contrast can be selected by ADJUST CHANNEL using **LEFT** or **RIGHT** button.

BRIGHTNESS: 1 to 99 %

BRIGHTNESS can be changed using **LEFT** or **RIGHT** button.

- NOTE: Minimum value is 1 (very dark), maximum value is 99 (very bright).

CONTRAST: 1 to 99 %

CONTRAST can be changed using **LEFT** or **RIGHT** button.

PTZ TYPE (Pan, Tilt and zooming protocol selection)

The high end camera(s) with panning, tilting and zooming function would be connected with some of video inputs. The camera(s) has(have) its own control protocol to control panning, tilting and zooming, according to PTZ camera manufacturer.

In order to control PTZ of the camera from remote area by network viewer software, proper PTZ TYPE should be selected in here. Your DVR supports over ten PTZ cameras. According to customer requirements, PTZ control will be added in it.

* NOTE: PTZ stands for pan, tilt and zooming.

* PTZ protocols: Panasonic/ Pelco-D/ PelcoP/ Techwin/ Niko/ DRX502A_DSC230s /KRE_301_302/ GC_755_NP/ TOA_CC554/ RAS716LS and so on.

2) SEQ DEWELL TIME: NONE/ 1 to 60 seconds.

SEQ DWELL TIME can be changed using **LEFT** or **RIGHT** button.

- NOTE: It is just reflected in sequential display mode.

3) TIME/DATE OSD: ON/ OFF

When it is set as OFF, characters which indicates time/ date will be disappeared on monitor. But time and date information still are added into recording files.

4) CAM NUMBER OSD: ON/ OFF

When it is set as OFF, characters which indicates camera number will be disappeared on monitor.

5) VIDEO LOSS OSD: ON/ OFF

When it is set as OFF, black pictures will be displayed in the cameo with video loss.

When it is set as ON, "VIDEO LOSS" character with white color will be displayed in blue screen.


6) POP-UP DISPLAY: ON/ OFF

When it is set as OFF, pop-up image of camera which motion detection or alarm triggering is occurred will not displayed. When it is set as ON, the channel (s) which motion is (are) detected or external alarm is (are) triggered will be POP-UP in monitor during maximum 30 seconds. In case that motion detection or alarm event is occurred more than two channels, POP-UP picture will be appeared in monitor turn by turn during 3 seconds for each channels. Total period of POP-UP display is 30 seconds.

7) POSITION: According to monitor, even same Video signal can be displayed on different position of monitor by the deflection characteristic of it. In this case, vertical and horizontal display position can be adjusted by "VERTICAL" and "HORIZONTAL" of POSITION.

POSITION		
1	VERTICAL	: 52
2	HORIZONTAL	: 205
3	DEFAULT	: NO

4. RECORDING SETUP

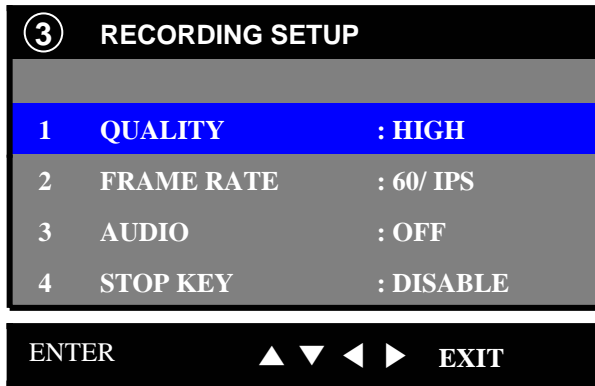

To access RECORDING SETUP, press **ENTER** when RECORDING SETUP in MAIN MENU using **DOWN** or **UP** is highlighted with blue color. The menu above will appear on monitor.

1) QUALITY: LOW, STANDARD, STANDARD PLUS, HIGH

Your DVR support four recording quality from low to high. It can be selected using **LEFT** or **RIGHT** button.

2) FRAME RATE: 60, 30, 15, 10, 5, 1, 0.5 IPS.(NTSC)


Your DVR support several frame rates from 0.5 to 60 Image per seconds for NTSC from 0.5 to 50 IPS for PAL. It can be selected using **LEFT** or **RIGHT** button.

NOTE: **when your DVR is in recording mode, some of parameters related to RECORDING can't be changed.**

3) AUDIO: ON/ OFF

Your DVR can select whether to record audio signal with video signal together or not. It can be selected using **LEFT** or **RIGHT** button.

4) STOP KEY: DISABLE/ ENABLE

In case of manual recording, manual recording is started and stop by the **REC/ STOP button** . This STOP KEY **ENABLE** can protect the “**recording stop**” which is not intended.

NOTE: While your DVR is on recording mode, it doesn't support the setup related to the recording including recording quality, frame rate, audio ON/ OFF and date/ time setup in SYSTEM SETUP.

5. ALARM SETUP

④ ALARM SETUP		
1	FRAME RATE	: 60/ IPS
2	DURATION	: 3 MIN
3	SENSOR TYPE	: NONE/ N.O/ N.C
4	TRIGGER OUT	: DISABLE
5	BUZZER ALERT	: DISABLE

ENTER ▲ ▼ ◀ ▶ EXIT

To access ALARM SETUP, press **ENTER** when ALARM SETUP in MAIN MENU using **DOWN** or **UP** is highlighted with blue color. The menu above will appear on monitor.

1) FRAME RATE: 60, 30, 15, 10, 5, 1, 0.5 IPS.(NTSC)

Your DVR support several frame rates from 0.5 to 60 Image per seconds for NTSC from 0.5 to 50 IPS for PAL. It can be selected using **LEFT** or **RIGHT** button.

2) DURATION:

It define recording duration after motion is detected. This DVR support 10 sec, 30 sec, 1,2,3,4,5,6,7,8,9,10,20,30,40,50,60 minutes. It can be selected using **LEFT** or **RIGHT** button.

3) SENSOR TYPE: NONE/ N.O/ N.C

Your DVR can select the input type for external alarm inputs which usually has normal open or normal close using **LEFT** or **RIGHT** button.

4) TRIGGER OUT (Relay Output): DISABLE/ ENABLE

Your DVR support both dry open and dry contact through different relay output port. It can be selected using **LEFT** or **RIGHT** button.

5) BUZZER ALERT: DISABLE/ ENABLE

If external alarm sensor(s) be triggered, beep sound from buzzer by **BUZZER ALERT** with **ENABLE** would be occurred during two seconds.

6. MOTION SETUP

⑤ MOTION SETUP		
1	SENSITIVITY	: normal
2	FRAME RATE	: 60/ IPS
3	DURATION	: 1 MIN
4	CAM1	: DISABLE
5	CAM2	: DISABLE
6	CAM3	: DISABLE
7	CAM4	: DISABLE
8	BUZZER ALERT	: DISABLE

ENTER ▲ ▼ ◀ ▶ EXIT

Your DVR has built-in video motion detection function. Motion detection Enable/ Disable, motion area can be selected separately for each camera. When your DVR detects motion, it begin to record multiplexed video signals from the camera or cameras which motion is detected and display only the camera with motion during 30 seconds. Recoding duration can be selected in MOTION SETUP menu. To access MOTION SETUP, press **ENTER** when MOTION SETUP in MAIN MENU using **DOWN** or **UP** button is highlighted with blue color. The menu above will appear on monitor.

1) SENSITIVITY: 5 steps (very low, low , normal, high, very high)

Your DVR support 5 sensitivity levels. It can be selected using **LEFT** or **RIGHT** button.

2) FRAME RATE:

Your DVR support 60, 30, 15, 10, 5, 1, 0.5 IPS for NTSC. 50, 25,16, 10, 5, 1, 0.5 IPS for PAL. It can be selected using **LEFT** or **RIGHT** button.

3) DURATION:

It define recording duration after motion is detected. This DVR support 10 sec, 30sec, 1,2,3,4,5,6,7,8,9,10,20,30,40,50,60 minutes. It can be selected using **LEFT** or **RIGHT** button.

4) CAM1, CAM2, CAM3, CAM4: DISABLE/ ALL/ SETUP


Motion Enable/Disable, Motion zone can be selected separately for each of four cameras.

DISABLE means that function of motion detection isn't utilized.

ALL means that entire image area is selected for motion detection.

SETUP can be selected in order to select given image area which want to monitor motion detection. Total motion area consists of 14x10 blocks. To select arbitrary motion zone, select **SETUP** using **LEFT** or **RIGHT** button. And then press **ENTER** button to designate motion areas in 14x10 blocks. You can use **LEFT** or **RIGHT** button for horizontal movement **UP** or **DOWN** button for vertical movement, **ENTER** button for selection. You can define the area of the image where you don't want to detect motion. Selected blocks in 14x10 blocks will be blinking. To remove previously defined image block for motion detection, press **ENTER** button again at that block. After defining motion zone, press **MENU/ESC** button to return upper Menu. Motion detection zone is the area which edge of the motion blocks is not flickering.

< The example of motion area setup >

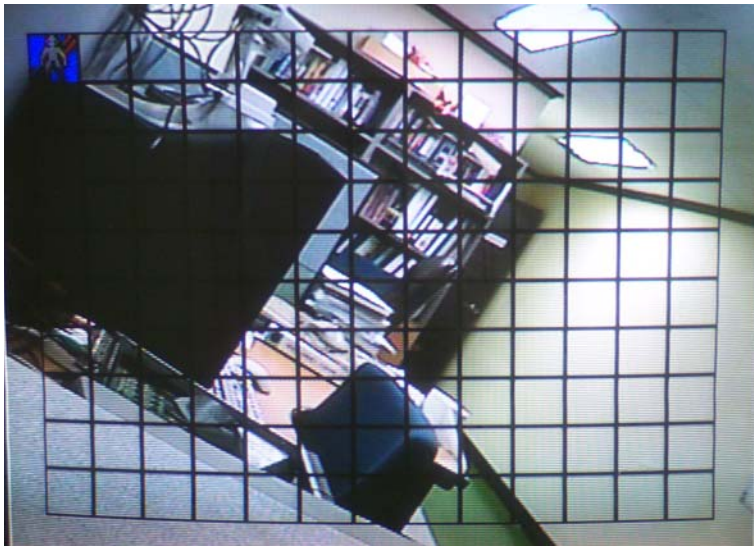

5) BUZZER ALERT: DISABLE/ ENABLE

If motion be detected in motion area, beep sound from buzzer by **BUZZER ALERT** with **ENABLE** would be occurred during two seconds.

7. WEEKLY SCHEDULE

⑥ WEEKLY SCHEDULE			
WEEK	START	DURATION	
SUN	00: 00	00: 00	OFF
MON	00: 00	00: 00	OFF
TUE	00: 00	00: 00	OFF
WED	00: 00	00: 00	OFF
THU	00: 00	00: 00	OFF
FRI	00: 00	00: 00	OFF
SAT	00: 00	00: 00	OFF
HOLIDAY	NONE	NONE	OFF

ENTER ▲ ▼ ◀ ▶ EXIT


To setup WEEKLY SCHEDULE, press **ENTER** when WEEKLY SCHEDULE in MAIN MENU using **DOWN** or **UP** button is highlighted with blue color. The menu above will appear on monitor.

WEEKLY SCHEDULE			
WEEK	START	DURATION	
SUN	00: 00	00: 00	OFF
MON	00: 00	00: 00	OFF
WEEK	NONE	NONE	OFF

ENTER ▲ ▼ ◀ ▶ EXIT

When blue bar is on SUN, blue bar movement from SUN to SAT and HOLIDAY can be selected by **DOWN** or **UP** button. To return Main Menu, **MENU/ESC** button is used. To move START, DURATION and OFF/ ON, **LEFT** or **RIGHT** Button is used. To decide the time for START time, DURATION and OFF/ ON, time with bold character or OFF/ ON at that position can be changed by **DOWN** or **UP** button .

For example, the blue bar movement by LEFT or RIGHT Button like this;

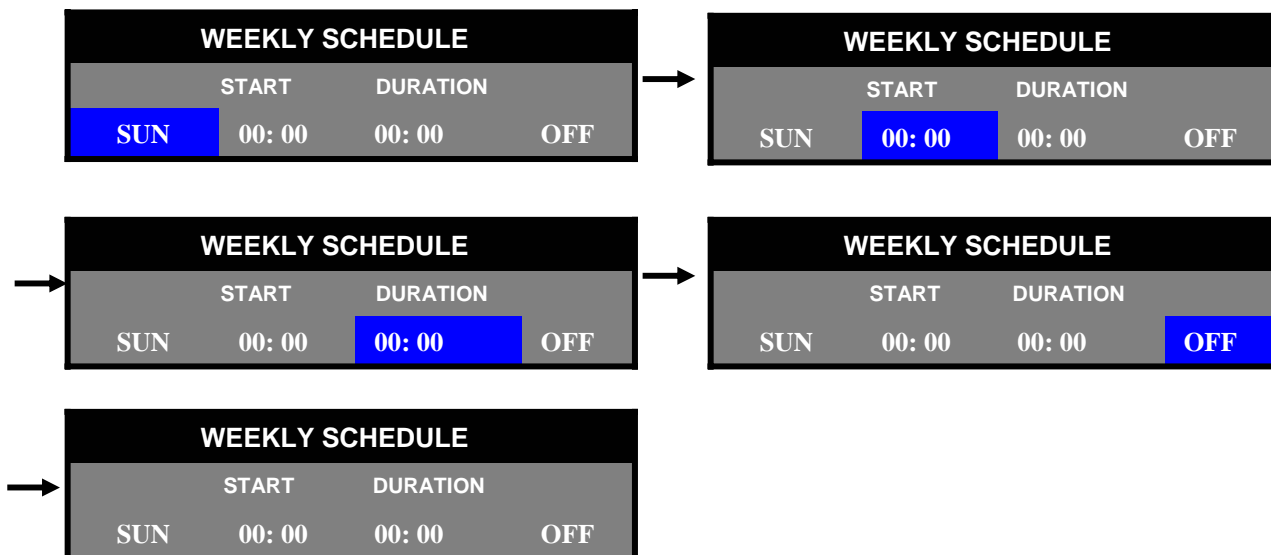

When blue bar is placed on **START**, **DURATION** and **OFF/ ON**, you can change value like time or **ON/ OFF**. When there is no bold character, blue bar can move from **SUN** to **SAT** and **HOLIDAY**. **START** means recording starting time. It can be changed from 00:00 to 23:59. **DURATION** means total recording time duration. **HOLIDAY** is for holiday recording setup. It can be adjusted from **SUN** to **SAT**.

8. NETWORK SETUP

⑦ NETWORK SETUP		
1	CONNECT	: STATIC/ DHCP
2	IP ADD	192. 168. 123. 171
3	SUB NET	255. 255. 255. 000
4	GATE WAY	192. 168. 123. 254
5	DNS	168.126.063.001
6	PORT	5000
7	NTP TIME	OFF
8	TIME ZONE	GMT + 09:00
9	DDNS STATUS	NONE/OK/ERR
ENTER ▲ ▼ ◀ ▶ EXIT		

To access NETWORK SETUP, press ENTER when NETWORK SETUP in MAIN MENU using **DOWN** or **UP** is highlighted with blue color. The menu above will appear on monitor.

1) **CONNECT:** STATIC or DHCP

You DVR can select STATIC IP or DHCP using **LEFT** or **RIGHT** Button.

2) **IP ADDRESS, 3) SUB NET MASK, 4) GATE WAY:**

If static IP be selected, IP address, SUB NET, and GATEWAY should be written on it manually, according to network environment. **LEFT** or **RIGHT** button is used for movement, **DOWN** or **UP** button is used for changing the value of parameter.

If DHCP be selected, your DVR would read network parameters automatically from network equipment, display them on IP ADD, SUB NET and GATEWAY.

5) **DNS:**

DNS : Server IP setting to change Domain Name into IP address.

Default value is KT's Domain Name Server IP.

- 6) **PORT** : Port number for TCP/IP connection in DVR
Net-Viewer should have same port Number to access remote DVR through network.

(Ex. 80 TCP www-http World Wide Web HTTP)

(Ex 123 UDP NTP Network Time Protocol)

Default Port No. is 5000. If Port is set as 5000, port number of from 5000 to 5002 is used in DVR. Therefore, If DVR is used in network environment with firewall, port number of from 5000 to 5002 should be opened for DVR's external access.

If IP sharing machine is used with DVR, "port forwarding" should be done.

7) **NTP TIME: OFF/ON**

DVR can synchronize "standard time" with Time Server using Network Time Protocol.

NOTE: If DNS server is not set properly in fixed IP address, this function will not be operated.

8) **TIME ZONE SETTING**

Time information can be synchronized with time server. For example to synchronize time, GMT + 8 for Taiwan, GMT + 9 for Korea or Japan.

9) **DDNS STATUS:** Dynamic DNS status display (This DDNS status is just readable.)

It is recommended not to use this DDNS service for fixed IP or IP sharing machine.

NONE – It indicate that DDNS is not used.

ERR - DDNS IP update failure

OK - Normal operation

< How to use DDNS service >

1. Create User ID, password and domain Name in the company which support DDNS service with free of charge.

(Ex. www.dyndns.org)


2. Access to your DVR using any PC installed Net-Viewer.

3. Input User ID, password, site and "DDNS enable" received from company which support DDNS service in DDNS setting of remote setup of Net-Viewer.

DVR will be upgraded as soon as DDNS setting by remote setup of Net-Viewer is finished.

4. Check the status of 8. DDNS STATUS of NETWORK SETUP.

9. ARCHIVING

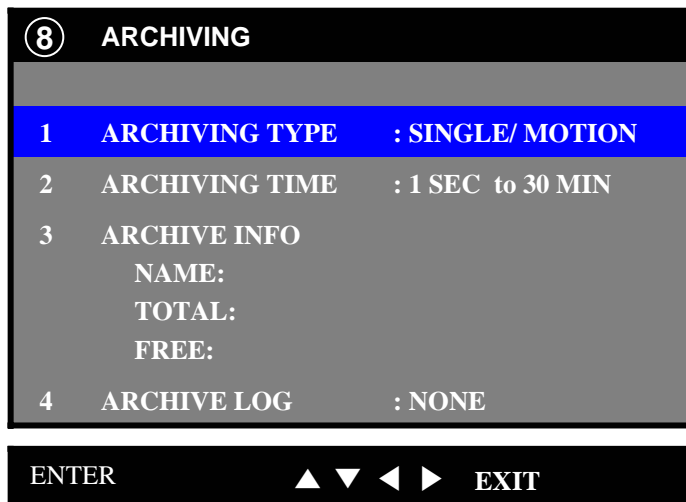

1) ARCHIVE TYPE: SINGLE or MOTION

For archiving data via USB port, first set-up ARCHIVING TYPE and ARCHIVING TIME which you want to have using LEFT or RIGHT Button. And then insert USB memory drive in USB port of DVR front panel.

Press ARCHIVE button in playback or live mode.

SINGLE in ARCHIVE TYPE means that field by field image can be captured in USB memory drive. MOTION means that it can be captured during the time duration when you set in ARCHIVE TIME.

Note: Archiving operation through USB Memory Drive can be executed only in live mode or playback mode.

2) ARCHIVE TIME: 1 to 60 seconds and 30 Minute.

ARCHIVE TIME is time duration which you want to archive in MOTION.

3) ARCHIVE INFO:

First, connect USB memory drive in USB port of DVR front panel. And then enter menu mode. You can see the information of USB Memory Drive inserted in DVR like USB memory drive manufacturer, total memory size, available memory size.

4) ARCHIVE LOG: NONE or ENTER

All of log information including DVR power ON/ OFF, recording time, event time and so on can be backup through USB Memory drive. After backup log file, you can see backup log information using WORD-PAD of PC. For ARCHIVE LOG, first select ENTER using **LEFT** or **RIGHT** Button. And the press **ENTER** button.

NOTE: Don't keep to connect USB Memory drive in USB port of DVR after finishing DVR power up. And don't plug out USB Memory drive when it is working. Please plug out USB memory drive after "Archive LED" turn off. When playback pictures is archived, archived speed is followed by playback speed.

5) The archived image playback

To play archived image, it needs NetViewer program. For the installation of NetViewer program in PC, Setup.exe in NetViewer S/W CD can be executed.

To playback archived image file in USB memory driver, First connect USB memory drive to PC, then execute Netviewer program.

NOTE: For more detail information about NetViewer program, confer the user's manual of NetViewer program.


< The procedure of archived file playback using NetViewer program >

- A) Install NetViewer program as executing Setup.exe in NetViewer S/W CD.
After finishing installation, next icon will be appeared in PC.



- B) Double-click the icon to execute NetViewer Program. Main Window of NetViewer program will be appeared. (Confer next page figure.)
C) Connect USB Memory drive to USB port of PC.
D) Search archived files using searching icon of NetViewer program.
E) Playback the archived file as double-clicking the file.

NOTE: USB Memory driver usually will be recognized as removable disk in most of PC.
Confer example of recognizing USB Memory drive in PC.

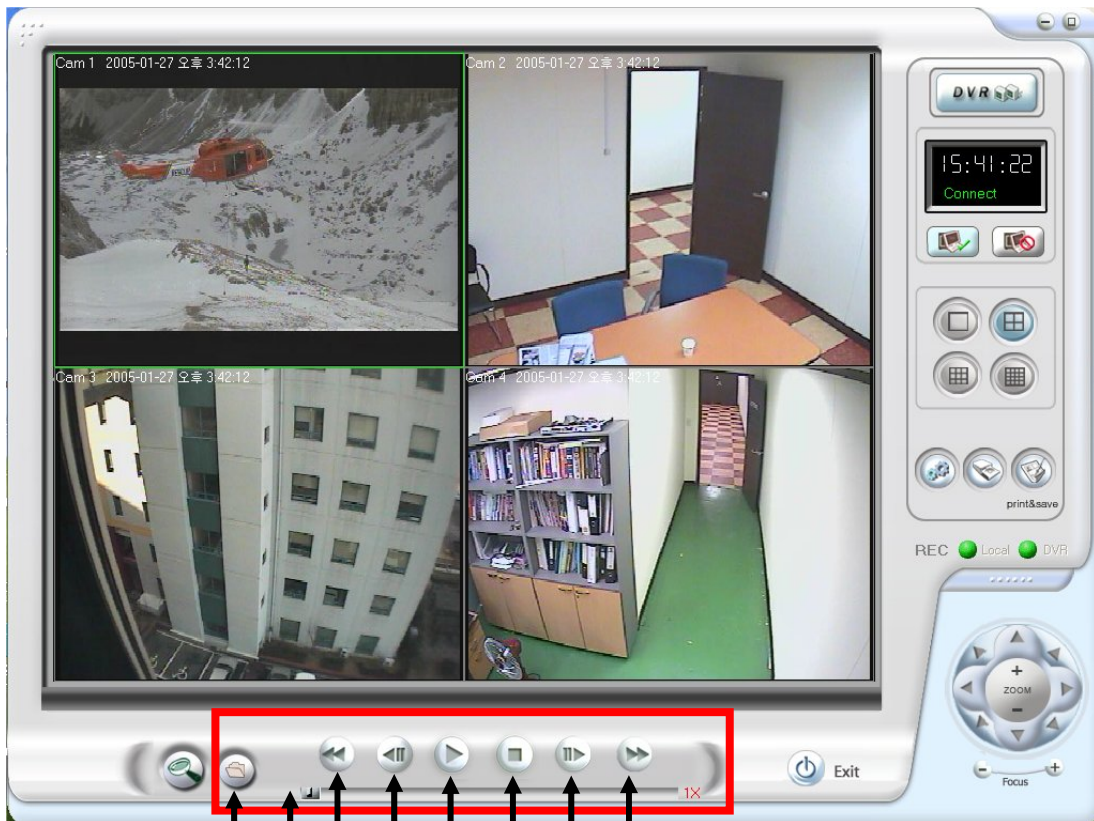

- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8

< NetViewer Program >

NOTE: On the viewer program buttons in Viewer GUI

1. Search Button:



This **Search Button** can be used to find archived image in USB Memory drive. After searching the image files, double-click the file. And then it will be played.

2. Slide bar;

In order to move much faster the archived image where you want to see, just drag this slice bar forward or backward.

3. Move to beginning of archived images

4. Move single frame backward


5. Playback button

6. Stop/ PAUSE button

7. Move single frame forward

8. Move to end of archived images

< Example; USB Memory Drive will usually be recognized as removable Disk in PC >

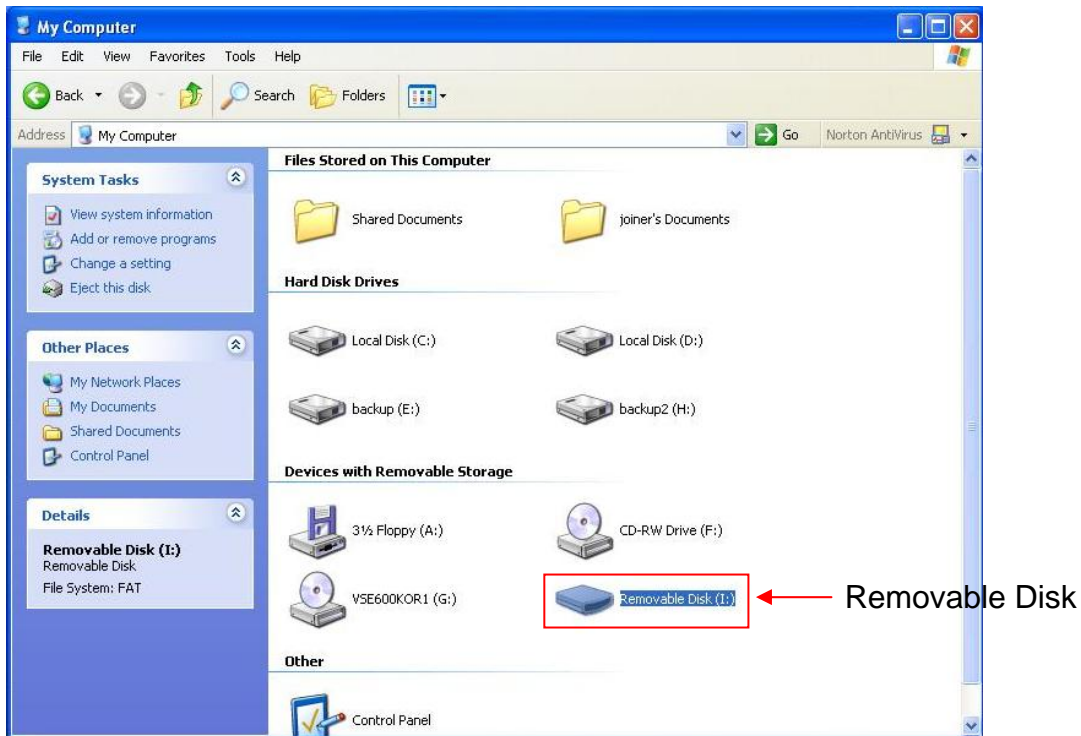

10. HDD INFORMATION

⑨ HDD INFORMATION		
1	HARD DISK	: WDC WD1200
	TOTAL	: 111GB
	FREE	: 111GB
2	FORMAT HDD	: NO
3	OVERWRITE	: OFF
ENTER ▲ ▼ ◀ ▶ EXIT		

1) MASTER HDD:

This machine automatically detects HDD, display HDD information in menu like total HDD capacity and available memory space.

2) FORMAT HDD:

This support quick HDD format function. To format HDD in FORMAT HDD, first select **YES** using **LEFT** or **RIGHT** Button, and then press **ENTER** button. Press **ENTER** button again after **MASTER** is displayed. Then quick format is implemented with **CONFIRM**.

3) OVERWRITE: Your DVR can be enable or disable HDD overwrite, when HDD is full.

11. Search List

SEARCH LIST					10/ 10	← The number of recorded files
LIST TYPE		ALL 10-15-2004				
1	10-15-2004	10:20	10-15-2004	11:20		
2	10-15-2004	12:20	10-15-2004	13:20		
3	10-15-2004	13:20	10-15-2004	14:20		
4	10-15-2004	14:20	10-15-2004	15:20		
5	10-15-2004	16:20	10-15-2004	17:20		
6	10-15-2004	18:20	10-15-2004	18:50		
7	10-15-2004	19:20	10-15-2004	19:25		
8	10-15-2004	20:20	10-15-2004	20:25		
9	10-15-2004	21:20	10-15-2004	21:50		
10	10-15-2004	22:00	10-15-2004	23:10		← Latest recorded file

ENTER	▲ ▼ ◀ ▶	EXIT
-------	---------	------

Search list can be sorted all the recorded file as **ALL/ TIME/ MANUAL/ ALARM/ MOTION/ SCHEDULE** using **DOWN** or **UP** button for fast file searching.

SEARCH LIST					10/ 10	
LIST TYPE		ALL 10-15-2004				
1	10-15-2004	10:20	10-15-2004	11:20		

→

SEARCH LIST					10/ 10	
LIST TYPE		ALL 10-15-2004				
1	10-15-2004	10:20	10-15-2004	11:20		

Change the numbers by highlighting them and using the **DOWN** or **UP** button to increase or decrease the number for year/ month/ date after moving from ALL to 2004-10-** using **LEFT** or **RIGHT** Button.

SEARCH LIST					10/ 10	
LIST TYPE		ALL 10-15-2004				
1	10-15-2004	10:20	10-15-2004	11:20		
10	10-15-2004	22:00	10-15-2004	23:10		

To select recorded file for playback, **DOWN** or **UP** button is used after pressing **ENTER** button. Playback will be started by pressing **PLAY/ STOP button (▶)** button.

SEARCH LIST					10/ 10	
LIST TYPE		ALL 10-15-2004				
1	10-15-2004	10:20	10-15-2004	11:20		
10	10-15-2004	22:00	10-15-2004	23:10		

NOTE:

1. If **PLAY/ STOP** button be pressed two times successively, latest recorded file could be played soon.
2. The example for searching recorded files by **TIME**.

Search list by **TIME** can be selected from **ALL/ TIME/ MANUAL/ ALARM/ MOTION/ SCHEDULE** using **DOWN** or **UP** button.






After moving 11-20-2004 date area using **LEFT** or **RIGHT** Button (and then related date character would be turned into bold character), the date which want to search can be selected by using **DOWN** or **UP** button. Then recorded files just after selected date, time (ex, **11-20-2004 10:33**) would be listed as bellows. To playback a recorded file from listed files, press **ENTER** button to move listed files. And then press **PLAY/ STOP** button (▶) for playback after selecting the recorded file using **DOWN** or **UP** button.

SEARCH LIST				2/ 2	
LIST TYPE			TIME	11-20-2004	10:33
1	11-20-2004	10:33	11-20-2004	11:20	
2	11-20-2004	22:00	11-20-2004	23:10	

12. DISPLAY Mode

 There are three kind of display modes such as single (as full), QUAD, sequential mode regardless recording mode. When there are motion detection or alarm triggering, the video channel which motion is detected or alarm is triggered would be display on monitor during 30 Seconds. After it pass 30 Seconds, your DVR would display previous display mode such as full, QUAD or sequential picture.




When your DVR is in recording, playback and network mode,    are displayed on left top corner of monitor. But it is on MENU Mode,   are temporarily disappeared as upper figure.

13. RECORDING Mode

There are several kinds of recording modes such as Manual, Schedule, Alarm event, Motion. Recording quality including high, standard plus, standard, low for all of recording is decided by the QUALITY setting in **RECORDING SETUP Menu**. Frame rate, recording time can be separately selected in each of **RECORDING SETUP Menu**.

It is recorded on HDD that 4Ch video input signals are multiplexed with field by field.

- 1) Manual recording is started by REC/STOP button of front panel.
- 2) WEEKLY RECORDING can be started by setting in WEEKLY SETUP.
- 3) Motion Recording can be started when any motions in image are detected.
- 4) Alarm recording is started by external alarm trigger input.

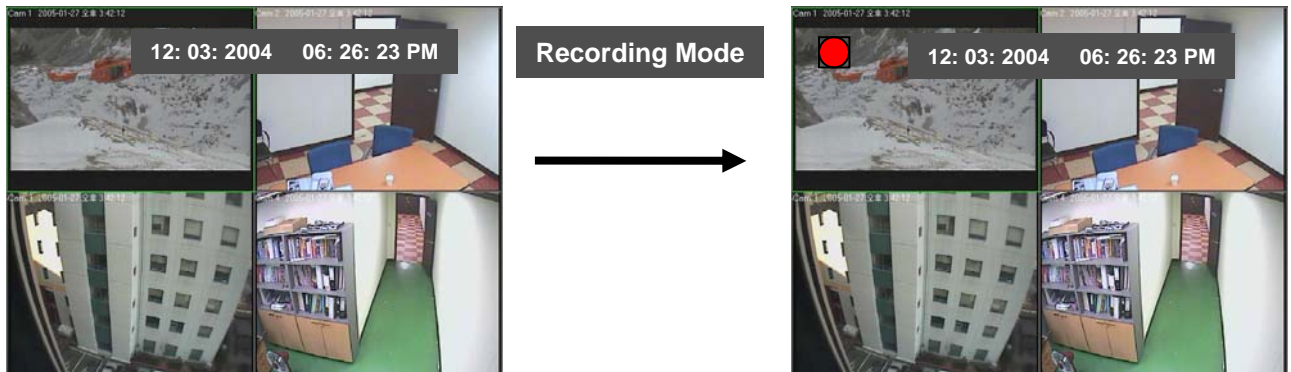


14. PLAYBACK Mode

Normal playback can be started PLAY/ STOP button (▶) after recorded file selection in search list. While your DVR is in playback mode, the camera channel which want to watch could be selected by UP(1), RIGHT(2), DOWN(3), LEFT(4) button. Fast forward (FF, ▶▶) or fast backward playback (REW ◀◀) can be done by FF (▶▶) and REW (◀◀) button. In order to freeze picture in playback, PAUSE || button is used. The movement of single field in still picture mode can be fulfilled by PAUSE || button. For selecting the forward or backward playback of single field, FF (▶▶) and REW (◀◀) button would be needed to press before using PAUSE || button.

Your DVR supports x2,x4,x8,x16,x32 playback for Fast Forward, x2,x4,x8,x16 play back for Fast Backward.

Note: When motion in image is detected or external alarm is triggered, there is pop-up image display of the channel during 30 seconds. But your DVR doesn't display pop-up image display of the channel when your DVR is in playback mode or search list Menu to minimize user's inconvenience.

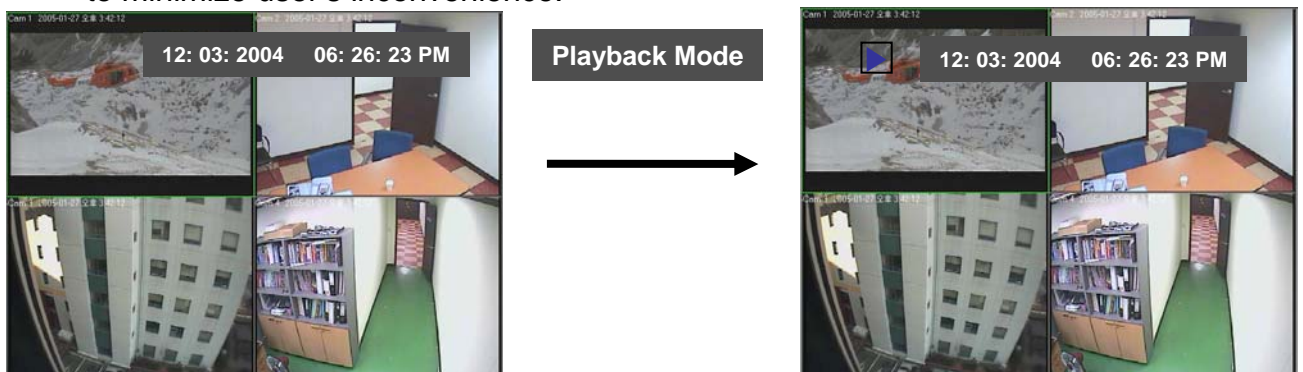

15. PTZ Control Procedure

- a) Select the camera (which PTZ camera is connected) to control PTZ using **UP**(1), **RIGHT**(2), **DOWN**(3), **LEFT**(4) buttons of front panel in your DVR.
- b) Press **ENTER** button to select PTZ mode. PTZ MODE OSD will be displayed on upper right corner of monitor.
- c) Use **UP**(1), **DOWN**(3) button for **up and down** movement of PTZ camera, **LEFT**(4), **RIGHT**(2) for **left and right** movement and **FF (▶▶)**, **REW (◀◀)** buttons for **zoom IN and OUT**.
- d) To escape PTZ control mode, press **ENTER** button or any button. Then the PTZ MODE OSD on upper right corner of monitor will be disappeared.

NOTE:

Before using PTZ control mode, please check that right selection of PTZ protocol in PTZ TYPE of DISPLAY SETUP is done.

IV. Software Upgrade Procedure

1. S/W Upgrade procedure

- 1) Copy files including - **trd400_tar** into USB Memory Drive using PC in advance.
- 2) Turn off power of your DVR.
- 3) Turn on power of your DVR.
- 4) Insert USB Memory Drive into USB port in front panel of DVR.
- 5) Press MENU button.
- 6) Input password and then press ENTER button.
- 7) Select SYSTEM SETUP menu in main menu.

* It takes several seconds for your DVR to display SYSTEM SETUP menu because upgrade files like - **trd400_tar** has been read into your DVR.

SYSTEM SETUP		
1	LANGUAGE	: ENG/CHN
2	VIDEO FORMAT	: NTSC
3	PASSWORD	: ****
4	ADMIN LOCK	: YES
5	TIME FORMAT	: 24HOURS
6	DATE FORMAT	: MM-DD-YY
7	DATE/TIME SET	:
	05: 20: 2005	10:50:11
8	DEFAULT	: YES / NO
9	REV STATUS	: VERSION 1 : 1 : 1
ENTER ▲ ▼ ◀ ▶ EXIT		

* NOTE:

The terminology of 9. REV STATUS of SYSTEM SETUP in version 1.1.1 (current version) is changed into 9. REV STATUS in version 1.1.2 (new version). After finishing S/W upgrade, terminology will be changed.

8) Move to 9. REV STATUS of SYSTEM SETUP.

The SYSTEM MENU shows UPGRADE version from 1.1.1 (current) to 1.1.2 (new).

SYSTEM SETUP		
1	LANGUAGE	: ENG/CHN
2	VIDEO FORMAT	: NTSC
3	PASSWORD	: ****
4	ADMIN LOCK	: YES
5	TIME FORMAT	: 24HOURS
6	DATE FORMAT	: MM-DD-YY
7	DATE/TIME SET	:
	05: 20: 2005	10:50:11
8	DEFAULT	: YES / NO
9	REV STATUS	: UPGRADE
	1 : 1 : 1	➔ 1 : 1 : 2

ENTER	▲ ▼ ◀ ▶	EXIT
-------	---------	------

9) Press **RIGHT**(2) button of front panel in your DVR.

"9. REV STATUS : UPGRADE" will be changed into "9. REV STATUS : CONFIRM"

SYSTEM SETUP		
1	LANGUAGE	: ENG/CHN
2	VIDEO FORMAT	: NTSC
3	PASSWORD	: ****
4	ADMIN LOCK	: YES
5	TIME FORMAT	: 24HOURS
6	DATE FORMAT	: MM-DD-YY
7	DATE/TIME SET	:
	05: 20: 2005	10:50:11
8	GMT HOUR SET	: 09 HOUR
9	REV STATUS	: CONFIRM
	1 : 1 : 1	➔ 1 : 1 : 2

ENTER	▲ ▼ ◀ ▶	EXIT
-------	---------	------

10) Press **ENTER** button of front panel in your DVR.

While "9. REV STATUS : WAIT" is appearing, S/W upgrade will be executed. It takes around 20 seconds. After completing S/W upgrade, your DVR will be re-booted.

NOTE:

1. After pressing **ENTER** button for upgrading, USB Memory Driver should not be plugged out before displaying "INITIALIZING" message in your DVR.
2. Please remove USB Memory Drive from front panel of your DVR, when "INITIALIZING" character is displayed on monitor.

SYSTEM SETUP		
1	LANGUAGE	: ENG/CHN
2	VIDEO FORMAT	: NTSC
3	PASSWORD	: ****
4	ADMIN LOCK	: YES
5	TIME FORMAT	: 24HOURS
6	DATE FORMAT	: MM-DD-YY
7	DATE/TIME SET	:
	05: 20: 2005	10:50:11
8	GMT HOUR SET	: 09 HOUR
9	REV STATUS	: WAIT
	1 : 1 : 1	→ 1 : 1 : 2
ENTER ▲ ▼ ◀ ▶ EXIT		

11) S/W Upgrade Completion !!!

S/W upgrade version will be seen on 9. REV STATUS of SYSTEM SETUP.

SYSTEM SETUP		
1	LANGUAGE	: ENG/CHN
2	VIDEO FORMAT	: NTSC
3	PASSWORD	: ****
4	ADMIN LOCK	: YES
5	TIME FORMAT	: 24HOURS
6	DATE FORMAT	: MM-DD-YY
7	DATE/TIME SET	:
	05: 20: 2005	10:50:11
8	GMT HOUR SET	: 09 HOUR
9	REV STATUS	: VERSION
	1 : 1 : 2	
ENTER ▲ ▼ ◀ ▶ EXIT		

← Upgrade Version

APPENDIX 1. Specification (1/2)


Video Input		4 Ch, NTSC/PAL, 1V peak-to-peak, 75 Ohm, BNC
Audio Input/ Output		1 Ch Input/ 1 Ch Output
Video Output		4Ch loop-through Output. 1 Monitor
Display Resolution		Display Resolution NTSC: 720x480, PAL: 720x576
Display Mode		Single, QUAD, Sequential
Recording Resolution		Full Mode, 4Ch Multiplexing Recording
		NTSC: 720x480, PAL: 720x576
Compression Algorithm		M-JPEG (modified)
OS		Embedded Linux
Triplex		Record / Playback / Network
Compression Rate (KB/ image) (NTSC: 720x240, PAL: 720x288)		Normal image: 13~17 (NTSC), 15~19(PAL)
		Complex image: 20~25 (NTSC), 22~27 (PAL)
Recording Frame Rate (IPS)		60 fps (NTSC), 50 fps (PAL)
Recording	Speed (IPS)	60/30/15/10/5/1/0.5 (NTSC), 50/25/12/6/5/1/0.5 (PAL)
	Modes	Manual, Schedule, Motion, Event
Display		60 Field per Sec (NTSC), 50 Field per Sec (PAL)
Schedule Recording		Choose recording section at 1min time intervals during days of week
		Full-time recording, Holiday Recording option
Status Indicator (LED)		Power, Network, Archive, Record (Button inside)
Event (Alarm Trigger, Motion)		Selectable input recording speed
		Duration: Follow/Continue/10sec/20sec/30sec/1,5,10 min
Alarm In(4)/ Relay Out(1)		NO, NC selectable. Both NO and NC support in rear panel for Relay Out
Playback		Normal: x1 speed
		Fast Forward: x2,x4,x8,x16,x32(NTSC, PAL)
		Fast Backward: x2,x4,x8,x16(NTSC, PAL)
		Move 1 image per pushbutton at still image (STILL Button)
		Searching function: Move to search list, Time/ Manual/ Event/ Schedule
Network (GUI or Internet Explorer)		Protocol: TCP/IP, PPP, and DHCP GUI or Internet Explorer viewing and configuration support
Communication Protocol		RS232 / RS485 (Pan/Tilt/Zoom)
HDD Type		EIDE, ATA-6, 3.5 inch, 7200rpm

APPENDIX 1. Specification (1/2)

HDD Management		Pre-formatting not required (Automatic formatting by system)
		(No loss of data by FAT breakage/Efficient HDD space increase)
		Data storing in sequence (Not decrease HDD lifetime)
Archiving		USB 1.1 for data export (M-JPEG format) (Note: Memory Key not included in the package)
Power Supply		AC100-240V, 50-60Hz
Mechanical	Unit Dimension	44(W) x31.5(D) x4.4(H) (17.3 in. x12.4In. x 1.73 In.) (19" rack mountable, 1U)
	Unit Weight	Unit Weight 11lb (5kg)
Ambient Temperature		40° to 104°F (5° to 40°C)
Approval		FCC Class A, CE and cUL


APPENDIX 2. Pin Description of connectors

1. USB Pin Descriptions

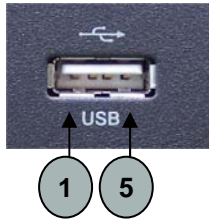


Pin NO.	Pin description
1	VCC
2	D- (TX-)
3	D+(TX+)
4	GND
5	SHIELD

2. LAN port (RJ-45) Pin Descriptions

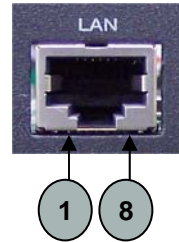

Pin NO.	Pin description
1	TXD+
2	TXD-
3	RXD+
4	No connected
5	No connected
6	RXD-
7	No connected
8	No connected

3. RS485 Pin Descriptions

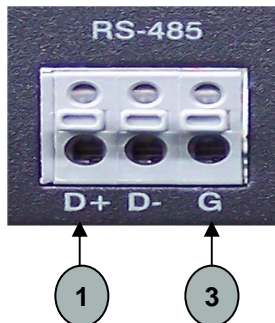


DVR


Pin NO.	Pin description
1	RS485 D+ (TX +)
2	RS485 D- (TX -)
3	GND

Slave Unit like PTZ Camera

Pin NO.	Pin description
?	RS485 D+ (RX +)
?	RS485 D- (RX -)

 

4. RS232C Pin (DSUB-9) Descriptions

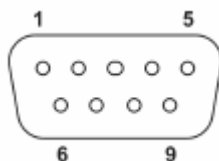

1 9

DVR

External Communication Unit

Pin NO.	Pin description
1	No connected. (DCD)
2	RXD (Receive Data)
3	TXD (Transmit Data)
4	No connected. (DTR)
5	GND (System Ground)
6	No connected
7	No connected
8	No connected
9	No connected



Pin	Pin description
1	No connected.
2	RXD
3	TXD
4	No connected.
5	GND
6	No connected
7	No connected
8	No connected
9	No connected

5. Alarm Input & Outputs Pin Descriptions



1

8

Pin NO.	Pin description
1-4	Sensor input 1 – Sensor input 4
5	Ground
6	Relay output with normal open
7	Relay output with normal close
8	Common

Warranty Guide

The quality of this product is guaranteed by strict quality control process and tests. If the Product is damaged despite following the instructions provided in the manual, this Warranty will be in effect, provided the product is damaged within 1 year of purchase.

Warranty Guide

- Check the Product Warranty Sheet to make sure it is still in effect.
- Check the problem again and contact your dealer you purchased from.
- About product repair, exchange, or refund, we follow the “compensation regulation for customer’s loss” announced by “the Economic Planning Board”.

Warranty

- If the product is damaged despite following the instructions provided in the manual, this warranty will be in effect, provided the product is damaged within 1 year of purchase.
- Service fee and replacement parts will be charged in below cases:
 1. Damaged the user’s carelessness.
 2. Damaged due to a natural disaster.
 3. Damaged due to the user not following the instructions and cautions written in the user’s guide
 4. Damaged due to incorrect power voltage, and/or frequency being used.
 5. If the Product Warranty sheet is expired.
 6. Damaged due to an engineer not employed by SIGNALSYNC modifying the system.
- If your system is damaged after the warranty period, free repair service will not be available. If you wish the system to be repaired, service fee and replacement parts will be charged.

Warranty

Product/ Model Name	
Serial Number	
Purchasing Dealer	
Purchasing Date	
Warranty Period	1 year from the purchasing date
Customer	

- The product Warranty Sheet will not be issued again.
- The Product Warranty Sheet must be filled on the same day of the product’s purchase.
- It will be requested to show this warranty to receive free repair service.

NetViewer S/W User's Manual

Version_1.2

Version_1.3:

- 1) IE Design modification**
- 2) Remote Configuration**
- 3) Fast searching by time slide bar
in NetSearching.**

April, '2005

Table of Contents

I. NetViewer Software Installation & Operation

1. Installation

2. NetViewer Program Operations

- 1) NetViewer Features**
- 2) Main Window**
- 3) Network Connection**
- 4) Image Display Window Selection**
- 5) The Storage of pictures transmitted through network in local HDD**
- 6) Viewer Program Set-up**
- 7) PTZ Camera Control**
- 8) Remote Searching**
- 9) Local Searching**
- 10) Playback Icons for local playback**
- 11) Print**
- 12) Remote Configuration**
- 13) AVI conversion**


II. Remote Viewing by Internet Explorer

I. NetViewer Software Installation & Operation


1. Installation

CAUTION: If an older version of Netviewer software or similar viewer software has been already installed on your computer, you should uninstall the software first.

- 1) Insert the installation CD.
- 2) Run the Setup.exe file. And following dialog box will be appeared.
Please wait a few seconds.

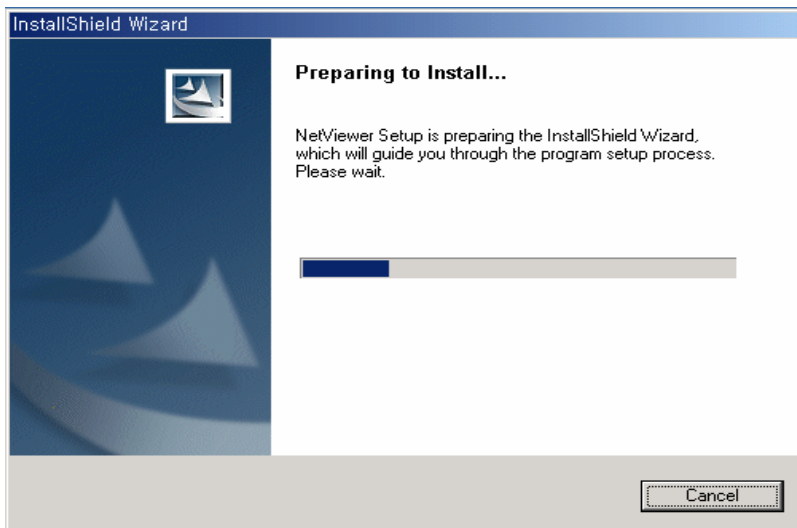

- 3) When the following dialog box appears, click Next.

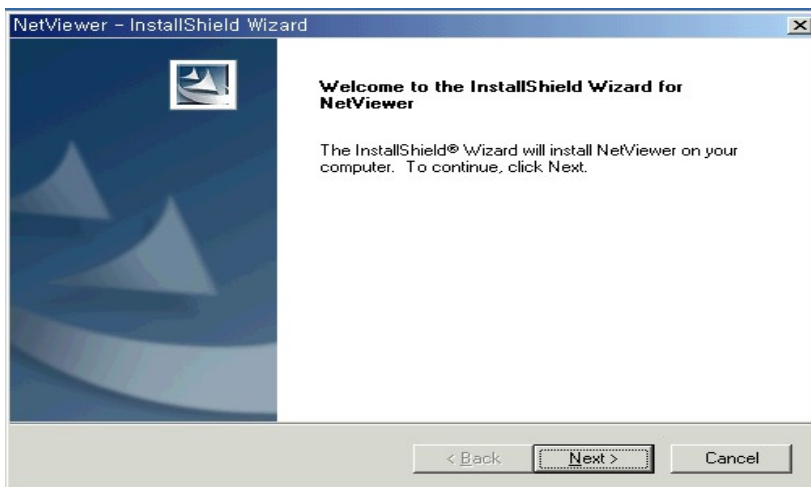

4) Please fill user name and company name in following dialog box, click Next.




The dialog box is titled "NetViewer - InstallShield Wizard". It has a header bar with a close button. Below the header, the title "Customer Information" is displayed, followed by the instruction "Please enter your information." There are two text input fields: "User Name:" with the letter 'c' entered, and "Company Name:" with the letter 'q' entered. Below these fields, the text "Install this application for:" is followed by two radio button options: "Anyone who uses this computer (all users)" (which is selected) and "Only for me (q)". At the bottom left, the "InstallShield" logo is visible. At the bottom right, there are three buttons: "< Back", "Next >", and "Cancel".

5) Please select installation style in following dialog box. "Typical" can be selected for normal installation. And then click Next.




The dialog box is titled "NetViewer - InstallShield Wizard". It has a header bar with a close button. Below the header, the title "Setup Type" is displayed, followed by the instruction "Select the setup type to install." Below this, the text "Click the type of setup you prefer, then click Next." is shown. There are three radio button options, each with a description: "Typical" (selected) with the description "Program will be installed with the most common options. Recommended for most users.", "Compact" with the description "Program will be installed with minimum required options.", and "Custom" with the description "You may select the options you want to install. Recommended for advanced users." At the bottom left, the "InstallShield" logo is visible. At the bottom right, there are three buttons: "< Back", "Next >", and "Cancel".

6) Please click Next.

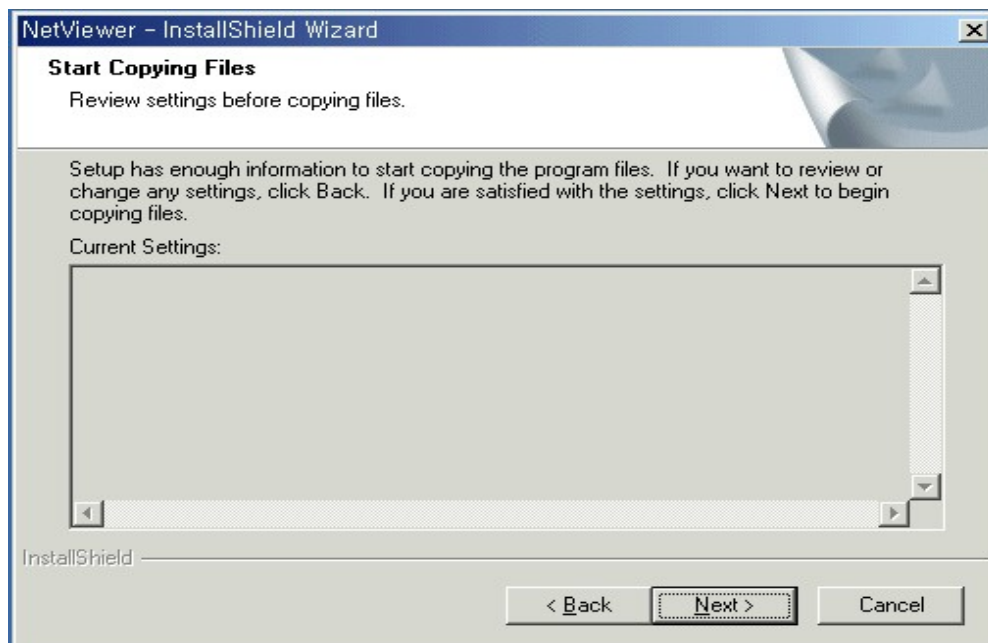

7) Installation is finished.

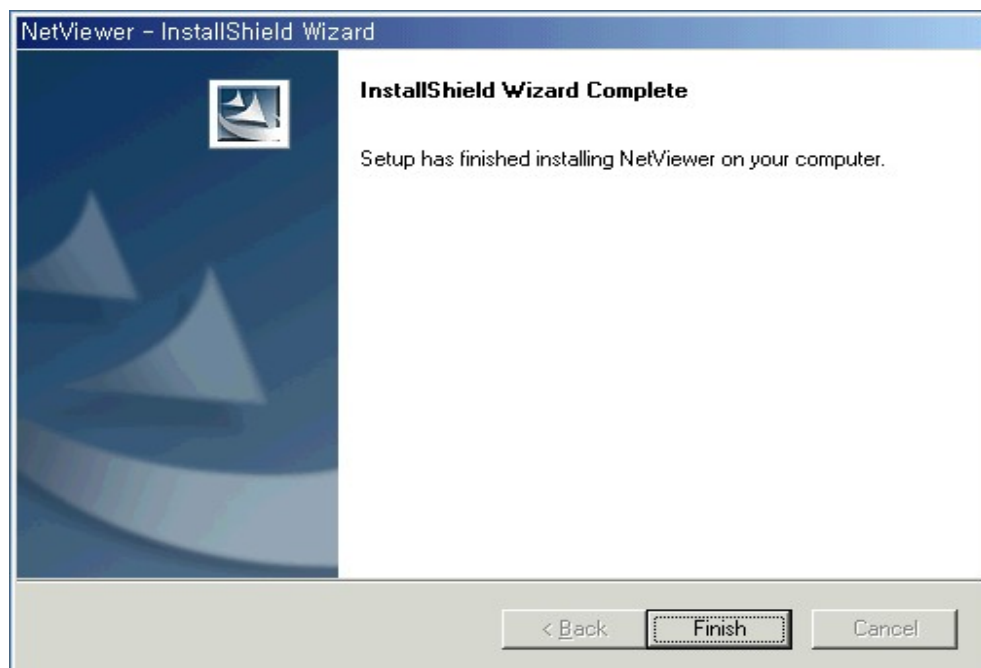


2. NetViewer Program Operations

1) NetViewer Features

NetViewer Program support such as functions;

- Live pictures monitoring and saving in local HDD.
- DVR file list searching, Playback and saving in local HDD
- Fast Playback by time selecting
- Remote configuration of all the DVR menu
- Pan, tilt and zooming Control
- Printing and JPEG & AVI conversion

2) Main Window

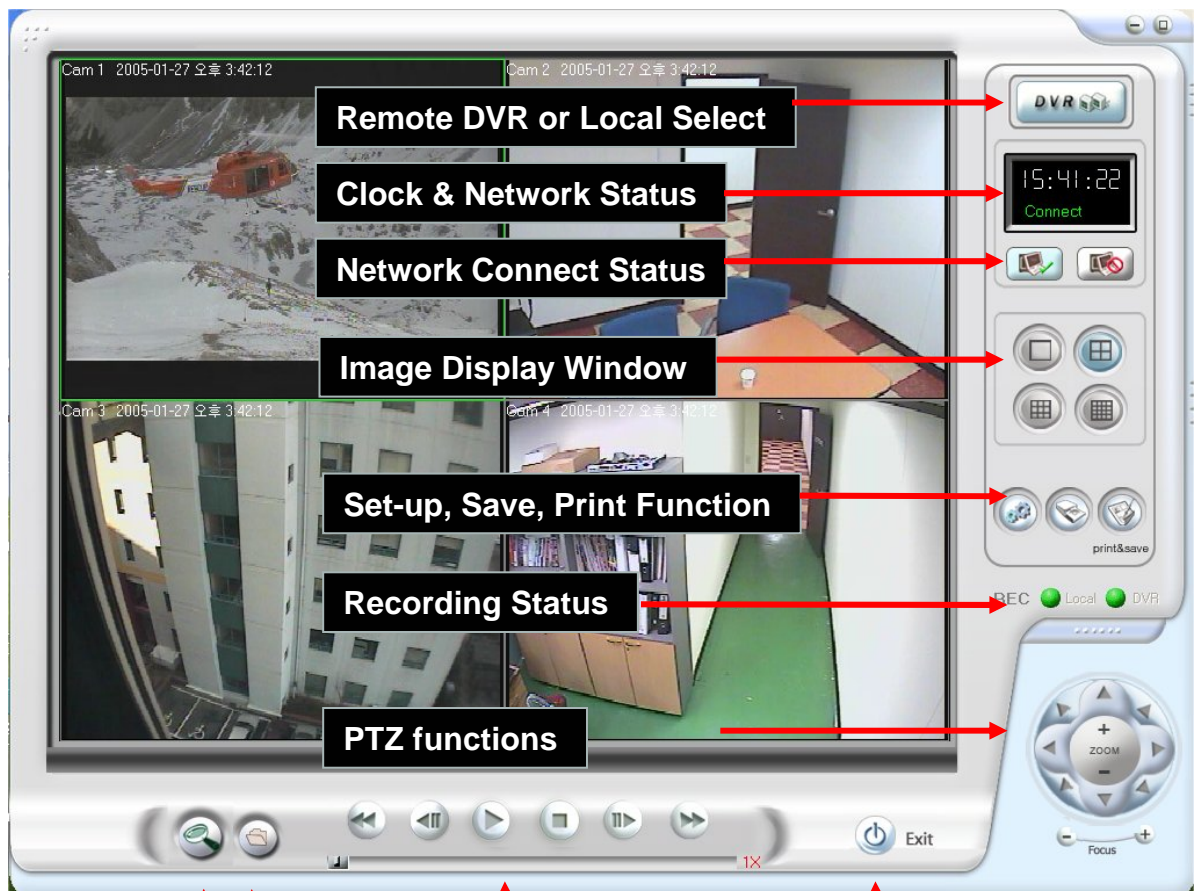


DVR Search Icons

Local Search Icons

Playback Icons

Exit Main Window

3) Network Connection

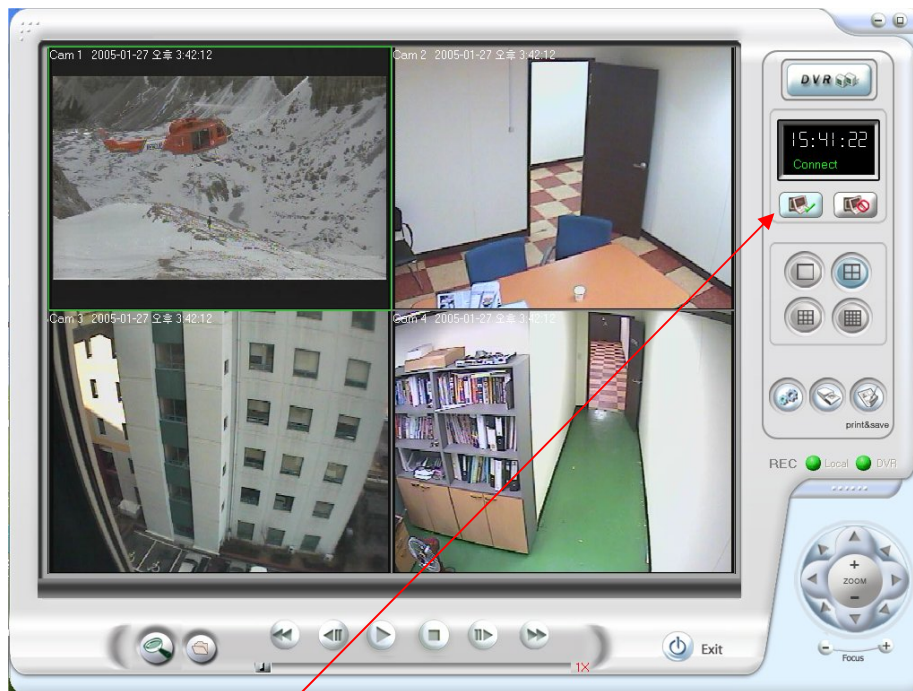

A) DVR Connection

When this DVR connection icon is clicked, below "Log-in" window will be appeared.

A screenshot of a 'Login' window. It has a title bar with 'Login' and a close button. The window contains four input fields: 'TITLE' with a dropdown menu showing 'admin', 'IP' with the value '192 . 168 . 123 . 189', 'PORT' with the value '5000' and a spin button, and 'PASS' with an empty text box. At the bottom are two buttons: 'OK' with a green checkmark and 'Cancel' with a red X. Red arrows point from the labels on the right to the corresponding fields and buttons.

B) User Account Selection

C) HQD400 DVR Server IP Address Input

D) HDQ400 DVR Server Port Input
(Default Port is 5000)

E) Password Input
(This password number is same as the
password of your DVR.)

F) Connection

G) Exit this window not to try connection


4) Image Display Window Selection




A) Single Picture Display



B) QUAD Pictures Display

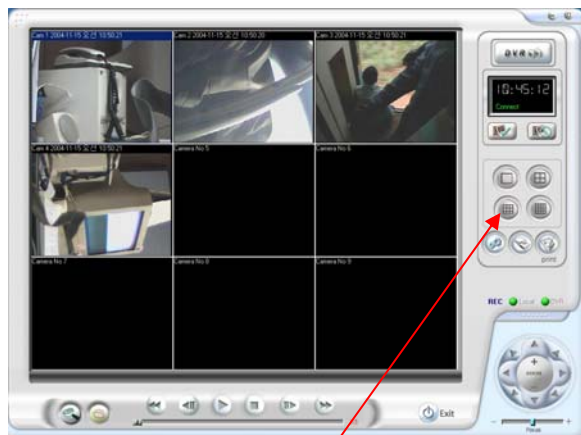

C) 9 Pictures Display
(for 9CH Expansion)


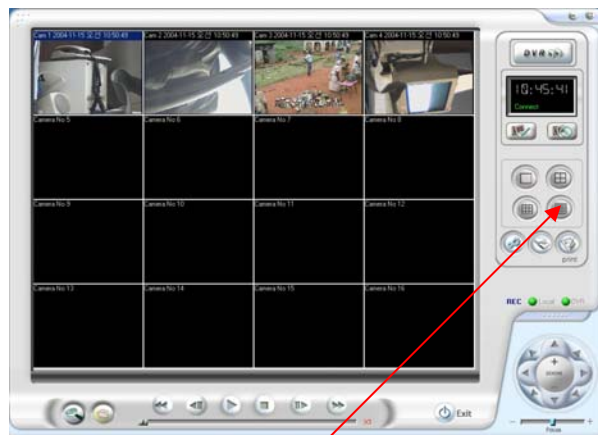


D) 16 Pictures Display
(for 16CH Expansion)


5) The Storage of pictures transmitted through network in local HDD



  The pictures received through network from remote DVR can be saved in local Hard Disk Driver.
When "REC" icon is pressed, the color of REC status icon will turn to be "red". If "REC" icon is pressed again, local recording will be stopped. And then the color of REC status icon will turn to be "green".



6) Viewer Program Set-up

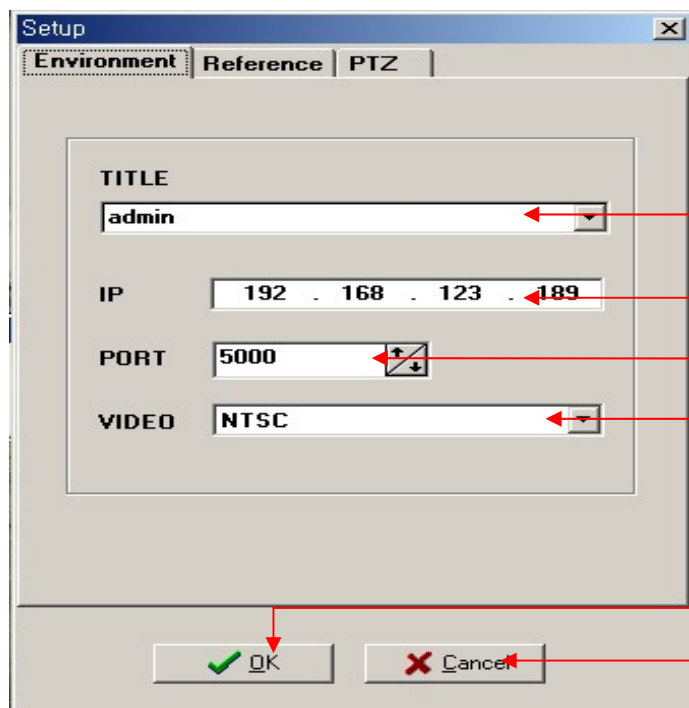

A) User selection

B) IP Address Input (or Changing)


C) PORT Input

D) Video Format Selection (NTSC or PAL). It needs to select Video Format NTSC or PAL for better video quality.

E) Exit after saving set-up parameter

F) Exit without saving set-up parameter

7) PTZ Camera Control

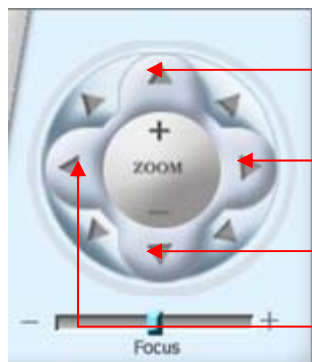


1) Tilt Up

2) Pan Right

3) Tilt Down

4) Pan Left

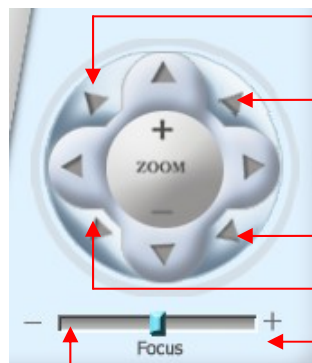

5) Pan/Tilt Up-Left

6) Pan/Tilt Up-Right

7) Pan/Tilt Down-Right

8) Pan/Tilt Down-Left


9) Focus Far

10) Focus Near

8) Remote Searching



For searching recorded files in remote DVR, DVR search icon (in above figure) can be pressed. If this icon is pressed, below figure will be appeared.

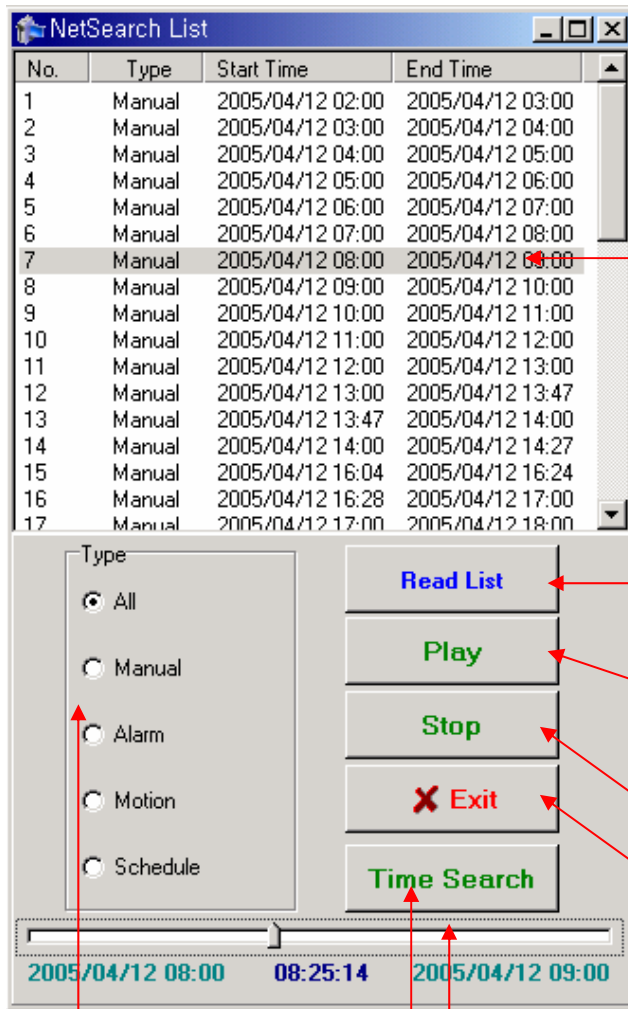

1) File List Window

It displays all of recorded file lists which is transmitted from remote DVR.

2) All of recorded file list in remote DVR can be read out by clicking "this icon (Read List)".

3) Selected file within File List Window can be playbacked by clicking "this icon (Play)".

4) Stop playback

5) Exit after saving set-up parameter

Viewer Program will palyback the file, if there is any selected file.



6) "Time Search" enable user to move and playback the given time of selected recorded file directly. For example, it is possible to playback the recorded file with 1hour file size from 08:25:14 (AM 8hour 25 Min. 14Sec.) using above "Time Search Slide bar".

7) It enables user to clarify recorded files according to the recording style.

9) Local Searching



10) Playback Icons for local playback

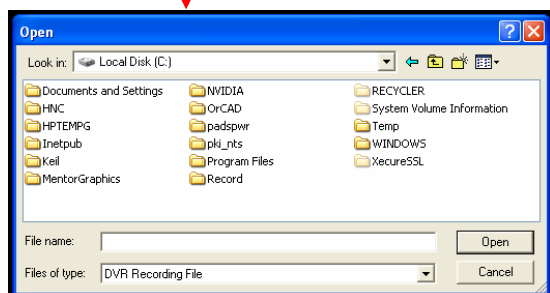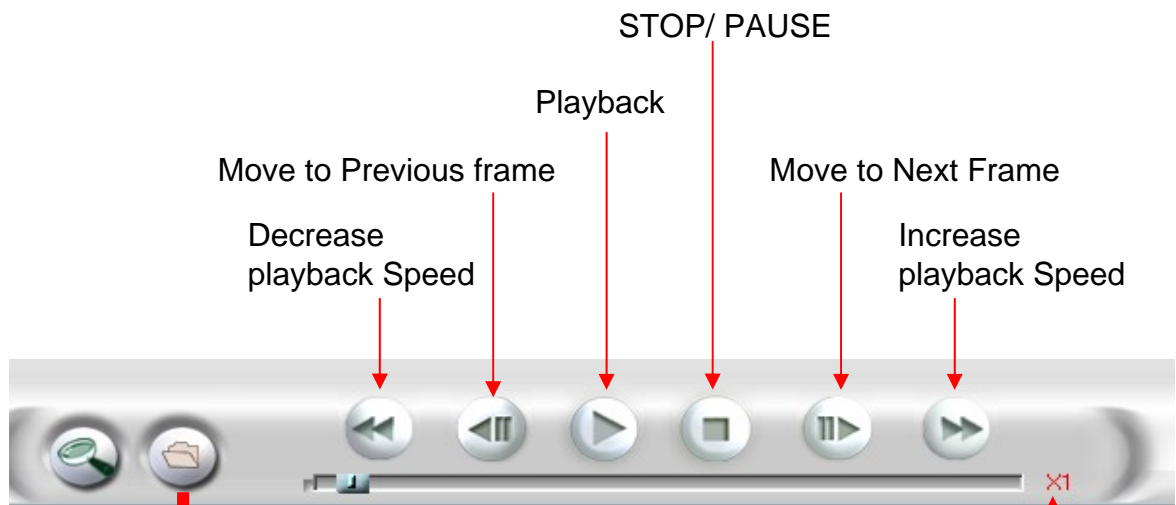


11) Print

- 1) After selecting displaying channel which would like to be printed, click the "Print icon"




- 2) The window for printing will be appeared as below.
Selected image will be printed as clicking this icon.

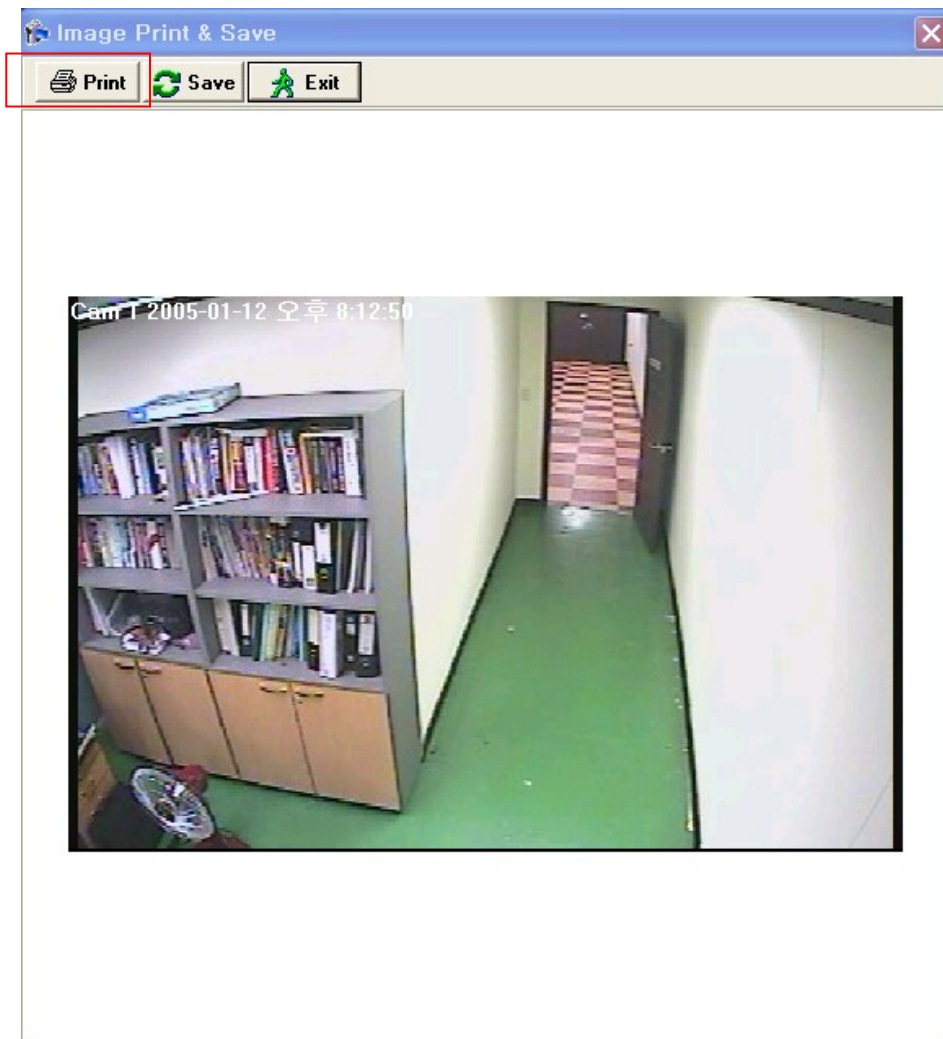


3) To make standard JPEG file, click “Save” icon, after selecting image.



4) If “Save” icon is pressed, below window will be appeared. Input file name like xxx.jpg which want to save. And press “SAVE(S). Then it will be converted as JPEG file and will be saved.

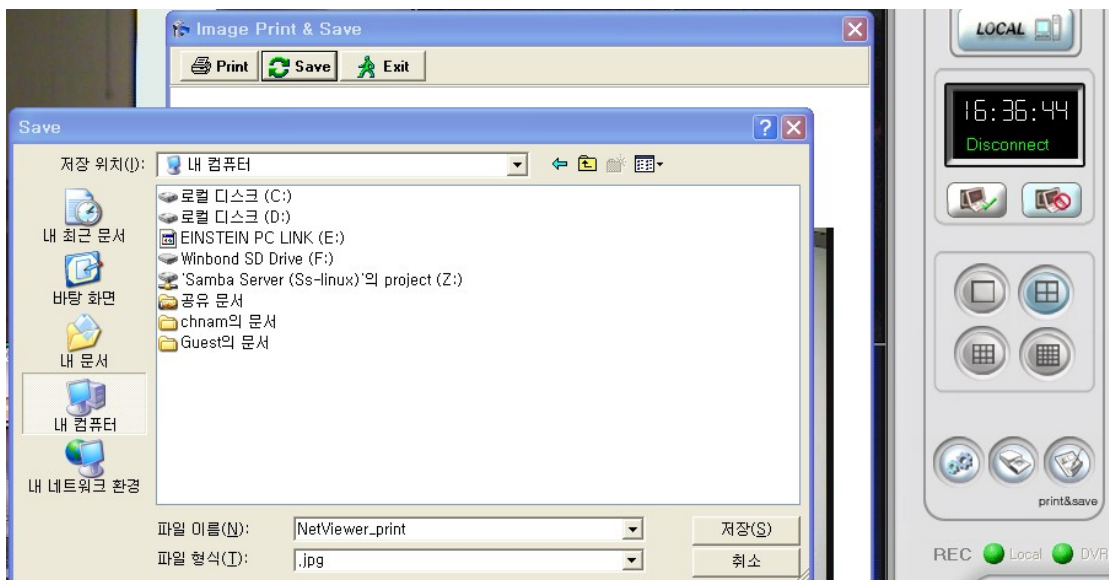

- 5) The file converted into xxx.JPG can be opened in any PC using Window media player and so on by clicking the xxx.JPG file as below window.

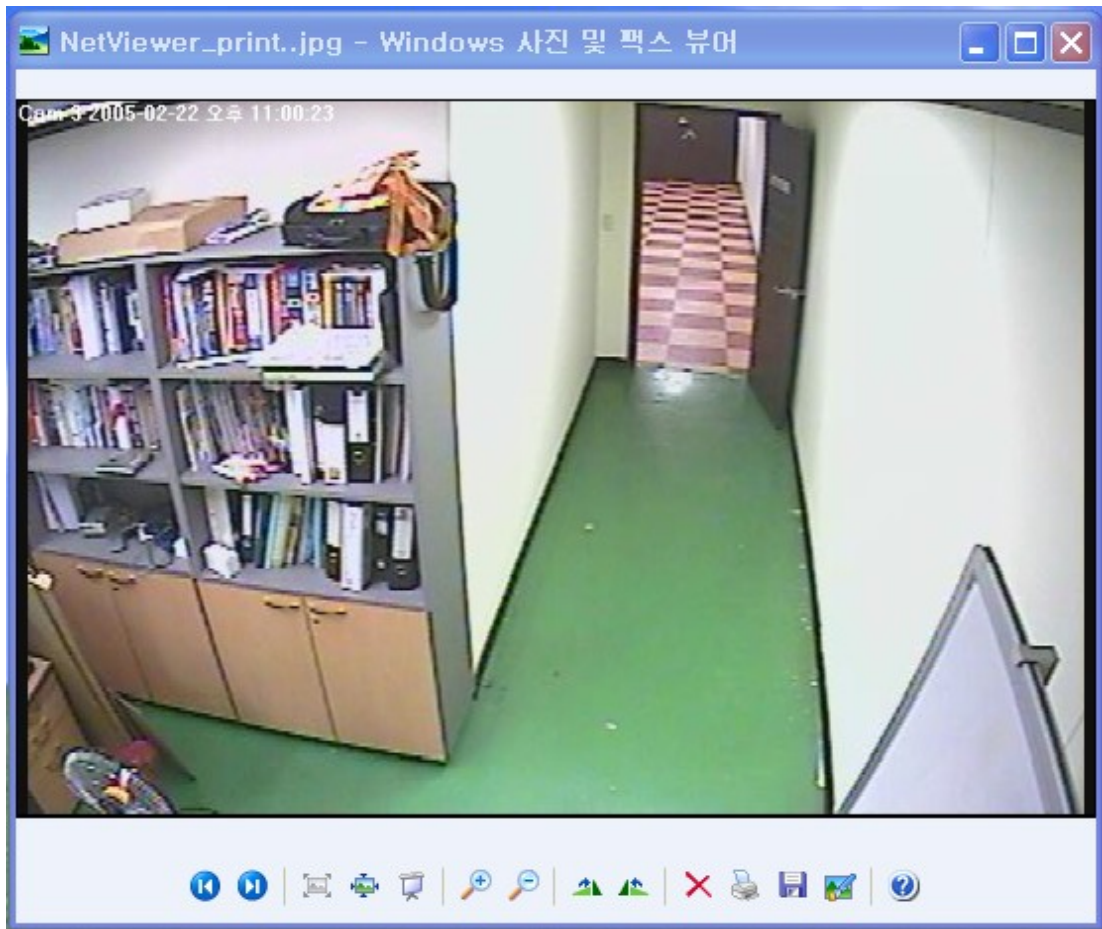

12) Remote Configuration

1) SYSTEM SETTING

Remote Setup

System | Display | Recording | Alarm | Motion | Schedule | Hdd | ddns

Password Setup

ADMIN LOCK: YES

Password Change

Time Setup

Time Format: 12 HOURS

Date Format: MM-DD-YY

GMT HOUR SET: 0

Revision status

VERSION 0.0.1

Update Exit

A) ADMIN LOCK: YES/ NO

If ADMIN LOCK is selected as YES, password is requested whenever it goes into menu. If NO, password isn't requested.

B) Password Changing

C) Automatic time setting by GMT+Hour time Server in worldwide (it is not supported for 4CH DVR)

D) Exit without saving set-up

E) Exit after saving set-up value.

Selected configuration parameters will be transferred to remote DVR

2) DISPLAY SETTING

Remote Setup

System | Display | Recording | Alarm | Motion | Schedule | Hdd | ddns

Color / PTZ Setup

Adjust Channel

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16

Brightness: 50

Contrast: 31

PTZ Type: LPT-100

DWELL Time Setup

SEQ. DWELL Time: 2 SEC

SPOT. DWELL Time: 0 SEC

OSD Setup

☒ Time OSD ☒ Cam OSD ☒ Video Loss OSD ☒ PopUp

Update Exit

A) Channel Selection.

In case of 16CH DVR, No1 to No16 will be active.

B) Picture Quality Setting (Brightness, Contrast)

C) PTZ Camera Protocol Setting

D) Dwell Time Setting for Sequential and SPOT Monitoring. (SPOT DWELL Time isn't supported in 4CH DVR)

E) OSD ON/ OFF Setting

G) Exit without saving set-up parameter

F) Exit after saving set-up value.

Selected configuration parameters will be transferred to remote DVR

3) RECORDING SETTING

Remote Setup

System | Display | **Recording** | Alarm | Motion | Schedule | Hdd | ddns

1. Quality **HIGH**

2. Frame Rate **60 /IPS**

3. Audio Rec **OFF**

4. Stop Key **ENABLE**

Update **Exit**

A) Recording Quality Setting.

B) Frame rate Setting

D) AUDIO: ON/ OFF

Your DVR can select whether to record audio signal with video signal together or not.

E) STOP KEY: DISABLE/ ENABLE
This STOP KEY **ENABLE** can not stop “recording stop” intentionally.

4) ALARM SETTING

Remote Setup

System | Display | Recording | **Alarm** | Motion | Schedule | Hdd | ddns

1. Frame Rate **60 /IPS**

2. Duration **3 min**

3. Sensor Type **NONE**

4. Trigger Out **DESABLE**

5. Buzzer Alert **DESABLE**

Update **Exit**

A) FRAME RATE Setting

From 0.5 to 60 Image per seconds for NTSC, from 0.5 to 50 IPS for PAL. can be selected.

B) DURATION:

It define recording duration after alarm is triggered.

C) SENSOR TYPE: NONE/ N.O/ N.C

Normal open or normal close can be selected for external alarm inputs

D) TRIGGER OUT (Relay Output)

Both dry open and dry contact through different relay output port can be supported.

E) BUZZER ALERT

Beep sound from buzzer when external alarm sensor(s) be triggered.

5) MOTION RECORDING SETTING

A) Camera Selection for motion setting

B) Motion Area Setting

Y: Active Motion Area

N: inactive motion Area

C) Motion Area SET/RESET

C) Motion Type Setting

Disable/ All area/ Motion Area Setting

D) Sensitivity Setting: 5 steps

From very low, low , normal, high to very high.

F) Frame Rate Setting

F) Duration Setting

G) BUZZER ALERT Setting

Beep sound from buzzer when motion is detected.

6) SCHEDULE RECORDING SETTING

A) START time Setting

Start time selection for schedule recording.

B) Duration time Setting

Actual recording time selection

C) On/ Off Setting

Schedule recording Enable/ Disable.

D) Holiday Recording Setting

* Note:

START means recording starting time. It can be changed from 00:00 to 23:59.

DURATION means total recording time.

HOLIDAY is for holiday recording setup. It can be adjusted from SUN to SAT.

7) HDD SETTING

The screenshot shows the 'Remote Setup' window with the 'Hdd' tab selected. The 'Information' section displays the following details:

MASTER	Maxtor 6Y120L0
114 GB	

SLAVE	ST3120022A
111 GB	

Below the information, the 'Overwrite' setting is set to 'ON' in a dropdown menu. At the bottom right, there are 'Update' and 'Exit' buttons.

1. HDD Information Display

It displays total HDD capacity with HDD manufacturer. If there is one HDD in DVR, one HDD capacity. If two HDD, total capacity of HDD will be displayed.

2. Overwrite On/Off Setting

8) DDNS SETTING

The screenshot shows the 'Remote Setup' window with the 'ddns' tab selected. The 'USER ID' field contains 'hqd400', the 'USER PASSWORD' field contains '*****', and the 'SITE' field contains 'hqd400.gotdns.com'. The 'DDNS Enable' checkbox is checked. At the bottom right, there are 'Update' and 'Exit' buttons.

DDNS Setting for IP address.

First, enroll **www. dyndns. Org** which supports DNS service with free of charge for DDNS setting.


And input the information of ID/password/DDNS site from above site.

(This password is different with DVR password.)

This information is transferred to remote DVR, it will be useful for user to access remote DVR by site name because Domain Name (site name) is utilized, even though IP address is changed in floating IP address (DHCP).


13) AVI conversion

- 1) The saved files in local HDD which is compressed as modified M-JPEG can be converted into AVI file for playback in any PC using Avi Converter which is generated by installing NetViewer software. Windows → All program (P) → Netviewer → Avi Converter is clicked. Then “AVI converter 1.0” window will be appeared.

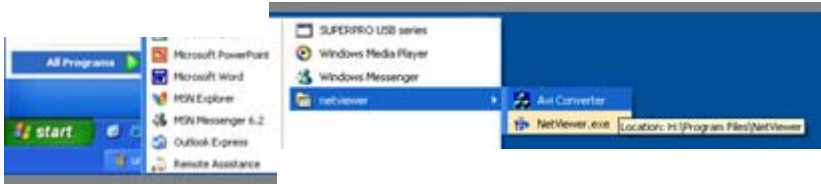


2) Conversion Procedure


- a) Click “File Open” icon as below figure.

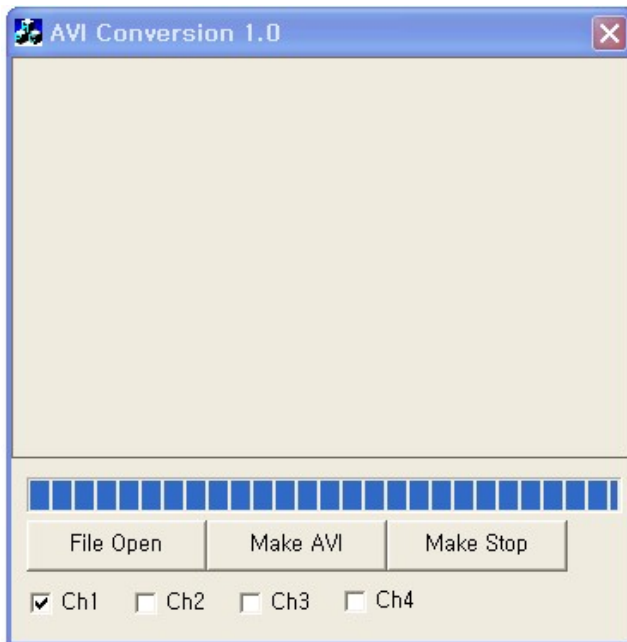


- b) Select a file to convert into AVI file. And then input file name for converting file.

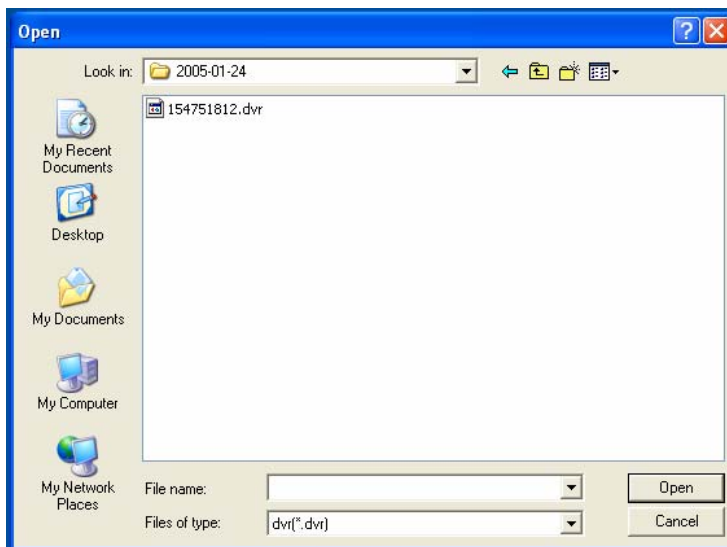

- c) AVI Conversion Program can be executed channel by channel. First, select the channel which is converted. Then press “MAKE AVI” to convert into AVI file. Below window will be appeared.

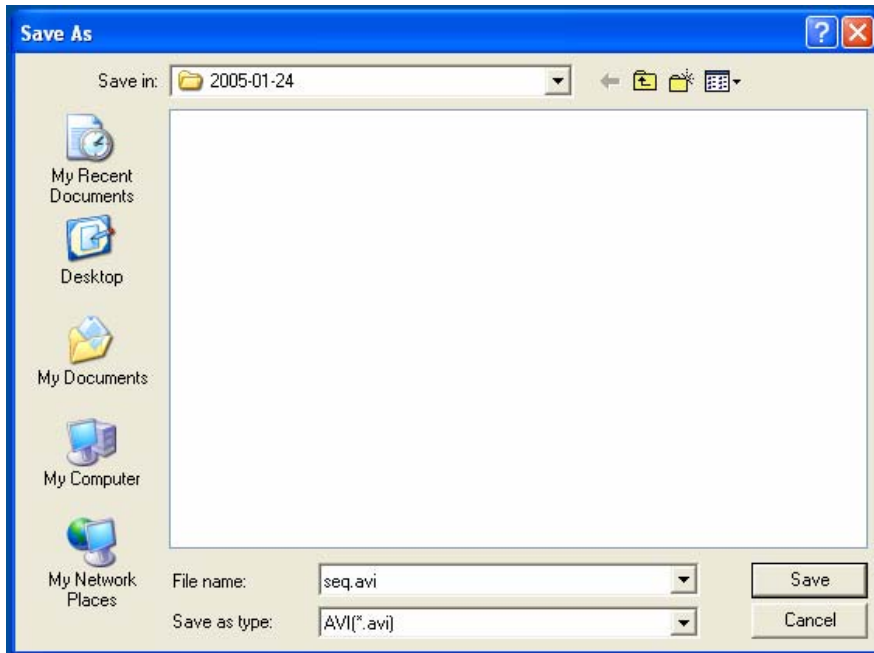

- d) Input file name and press “ Save (S)”. Then below window will be appeared. If compression type is selected, AVI Conversion Program can start AVI conversion.

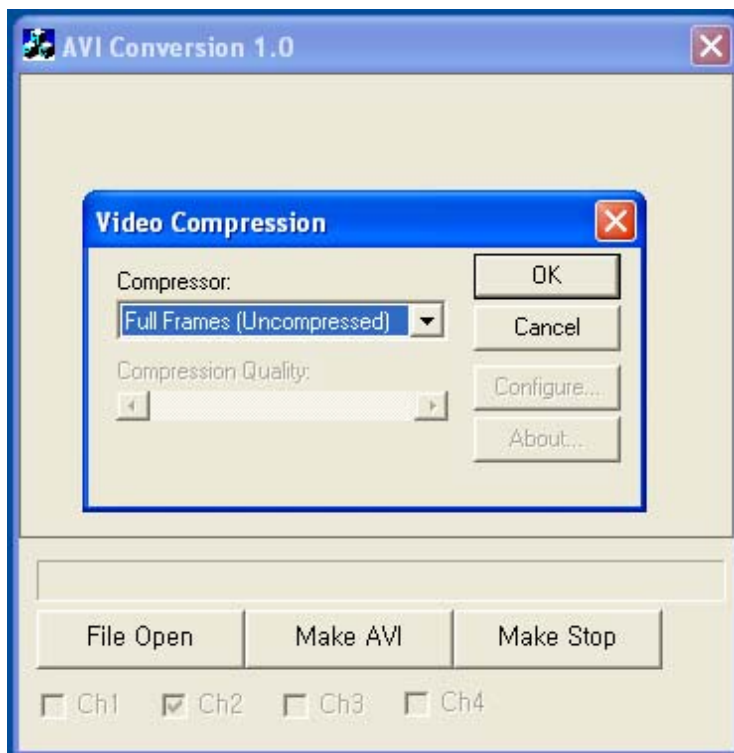

- e) If conversion is finished, below figure will be appeared. To finish it, press “Confirm”.
For another channel conversion, same procedure will be requested.




- f) Converted file can be played in any PC using Windows Media Player and similar media player as below.




II. Remote Viewing by Internet Explorer

1. Open Internet Explorer with IP address which is set-up in NETWORK SETUP of DVR.
Then below dialog box will be appeared.

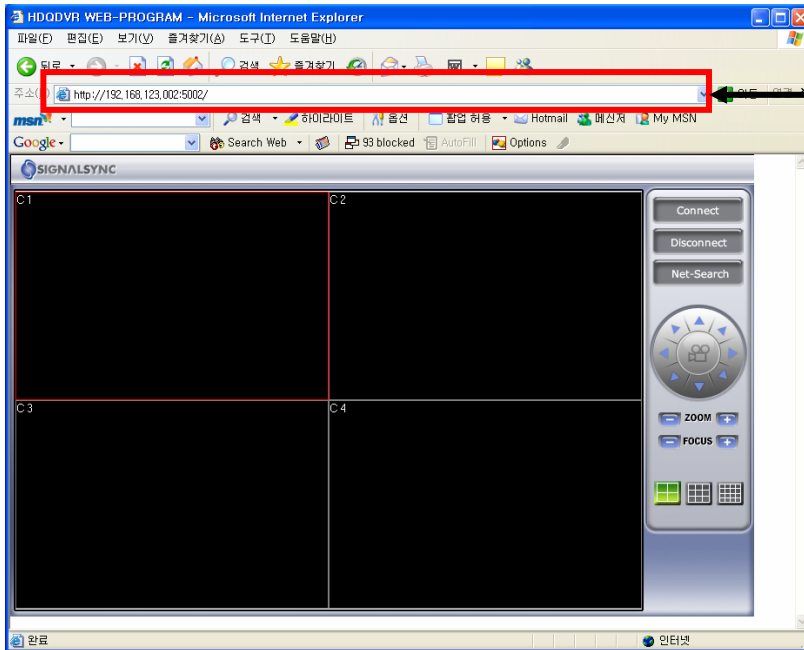

Input IP address with port No.
For example,
192.168.123.002:5002

2. Please press "Connect" icon on the right corner to access remote DVR.
Then below dialog box will be appeared.

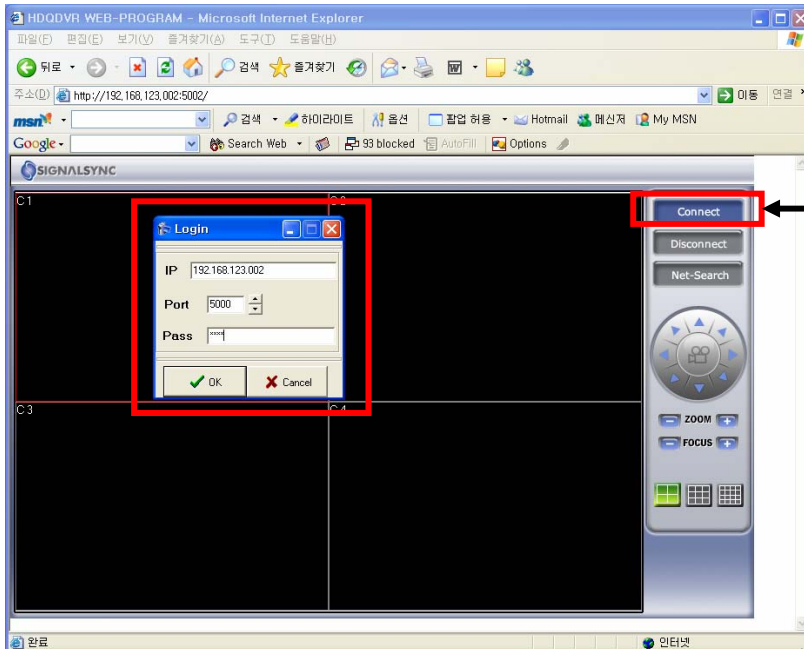


"Connect" icon.


Please input IP Address, Port number and password in below dialog box.

Note:


Password is the number which is stored in DVR.

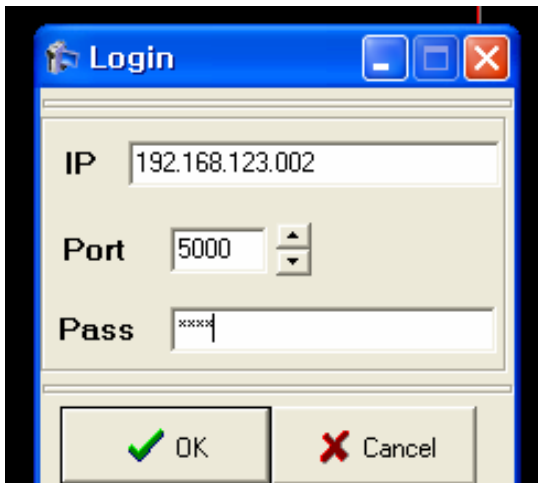

3. You can view live image of remote DVR through Internet Explorer as below dialog.

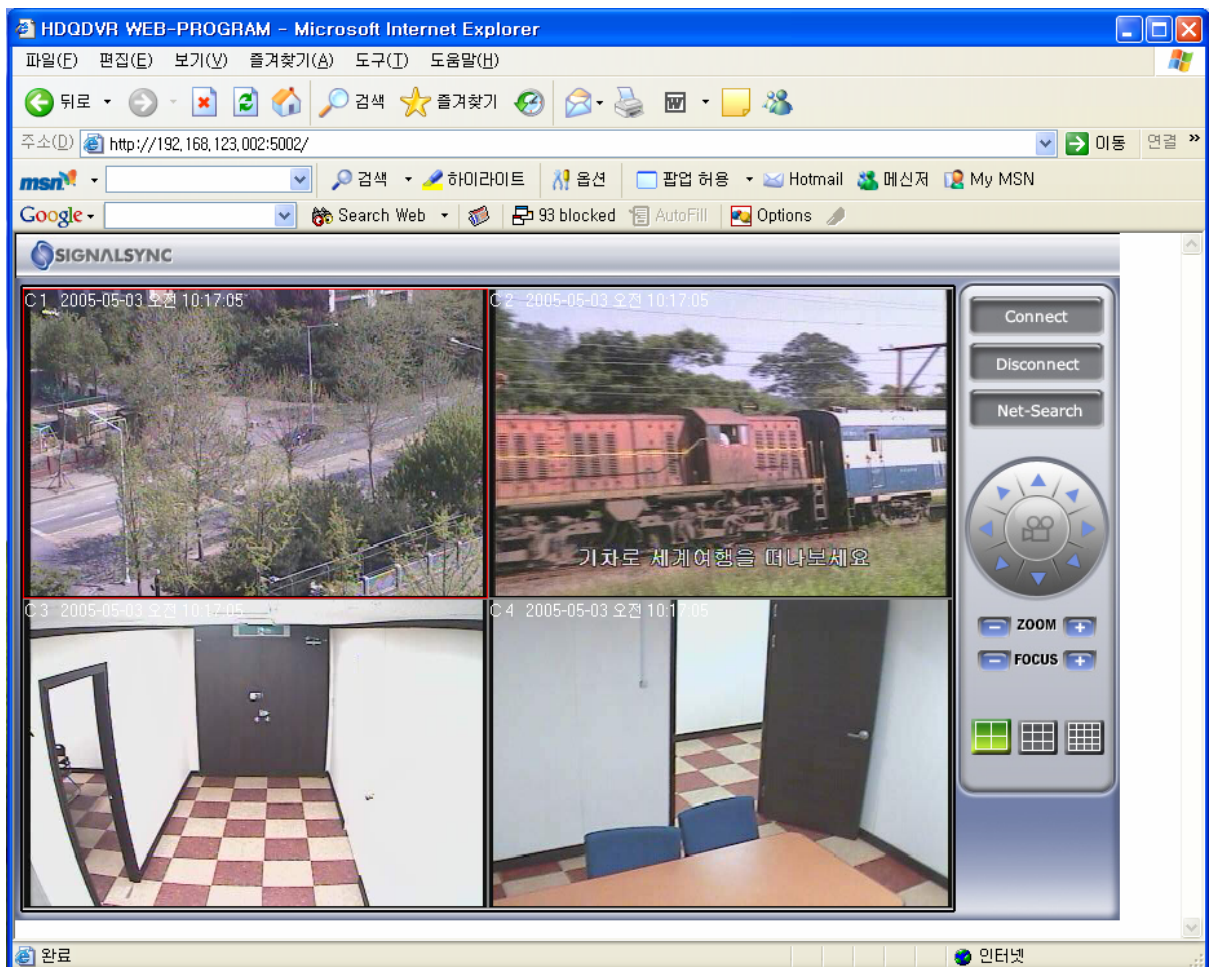

4. How to control PTZ Camera and picture display mode.

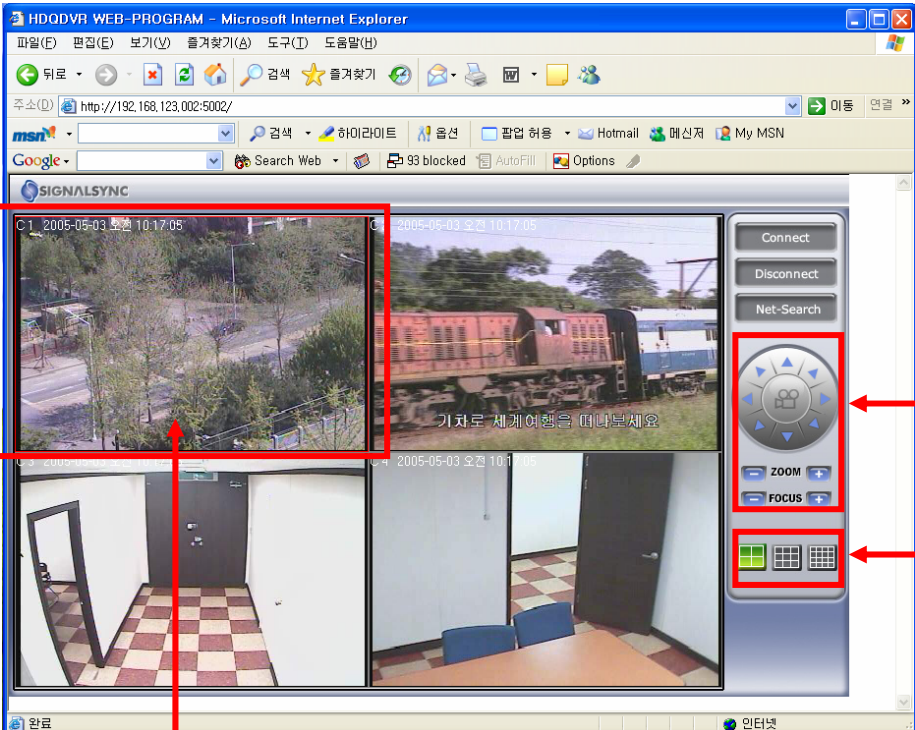

The screenshot shows the HDQDVR WEB-PROGRAM interface in Microsoft Internet Explorer. The main display area shows four camera feeds. The top-left feed is highlighted with a red box. To the right of the feeds is a control panel with buttons for 'Connect', 'Disconnect', and 'Net-Search'. Below these are PTZ control icons (a circular pad with arrows and a camera icon) and picture display mode icons (a 2x2 grid, a 3x3 grid, and a 4x4 grid). Red arrows point from the PTZ control icons and the picture display mode icons to their respective descriptions in the text boxes on the right.

PTZ Control Icons


- Left and Right
- Up and Down
- Zoom In/ Out
- Focus Near/ Far

Picture Display Mode

- 4CH/ 9CH/ 16CH

In order to control PTZ Camera, right PTZ Camera protocol should be selected in DVR. The picture area (Cameo) (which PTZ function is needed to control) is selected by mouse. And then press the PTZ control icon.

5. In order to search all of the recorded files of DVR, "NetSearch" icon can be pressed. Then below dialog box will be appeared.

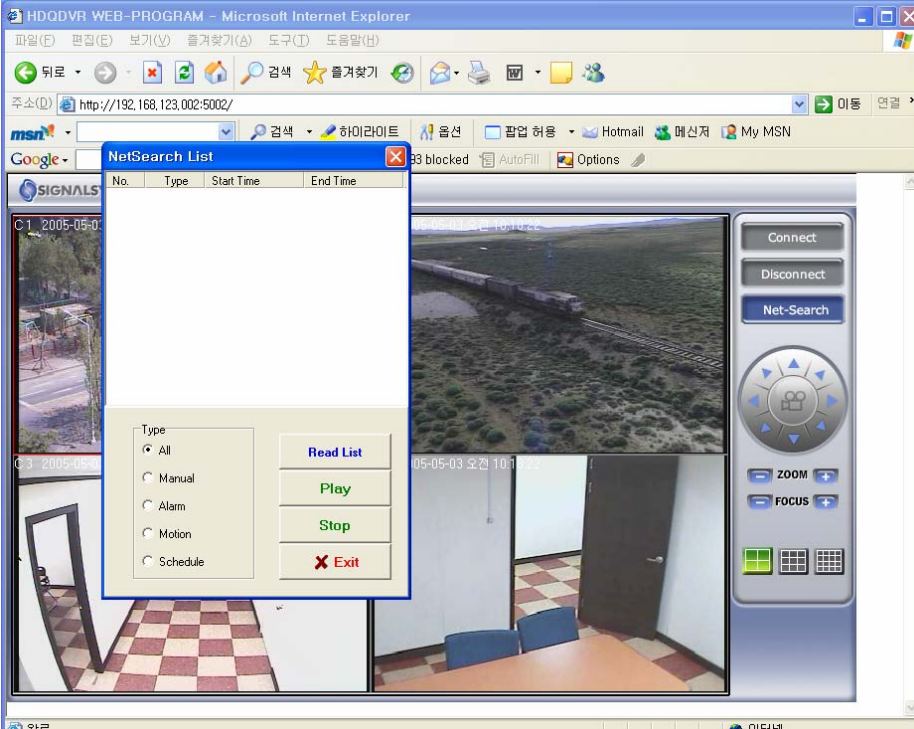

The screenshot shows the HDQDVR WEB-PROGRAM interface with the 'NetSearch List' dialog box open. The dialog box has a table with columns 'No.', 'Type', 'Start Time', and 'End Time'. Below the table are radio buttons for 'All', 'Manual', 'Alarm', 'Motion', and 'Schedule'. To the right of the radio buttons are buttons for 'Read List', 'Play', 'Stop', and 'Exit'. The background shows the same camera feeds and control panel as in the previous screenshot.


No.	Type	Start Time	End Time
-----	------	------------	----------

Type

- ☒ All
- ☐ Manual
- ☐ Alarm
- ☐ Motion
- ☐ Schedule

Buttons: Read List, Play, Stop, Exit

6. How to search recorded files of remote DVR.

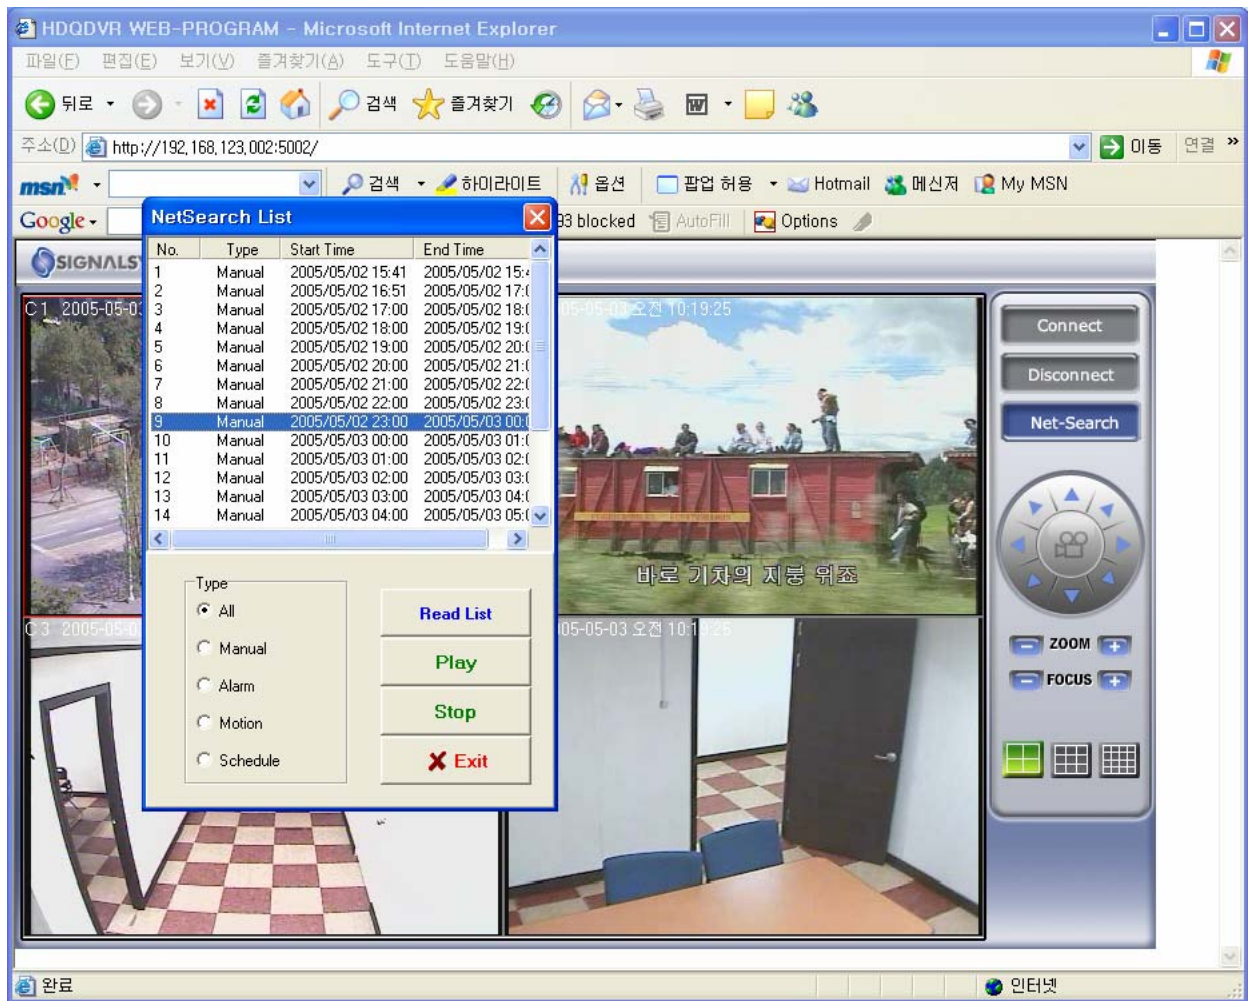

- 1) Read List Icon: It is used to read all of recorded files of remote DVR.
All of reading files can be sorted by "Type" which includes Manual, Alarm, Motion and Schedule.
- 2) Play: It is used to play one of file selected by mouse from all of lists.

< Playback procedure >

1. Select one file which you want to play by mouse
2. Press "Play" icon for playback.
3. Press "Stop" icon for stop the playback.
4. Press "Exit" icon to return to "live picture".